



Water Quality Monitor

Model Q46H-62 Free Chlorine Monitor



Badger Meter

ATI-UM-04596-EN-02 (August 2025)

User Manual

CONTENTS

Introduction	5
General	5
Standard System	5
Features	8
Q46H/62 System Specifications	9
Q46H/62 Performance Specifications	10
Analyzer Mounting	11
General	11
Wall or Pipe Mount	12
Panel Mounting	14
Sensor/Flowcell Mounting	15
General	15
Constant-Head Flowcell	15
Sealed Flowcells	16
Electrical Installation	18
General	18
Power Connection	19
Relay Connection	20
Direct Sensor Connection	22
Sensor Wiring	23
Junction Box Connection	24
Optional pH Compensation Input	25
Sensor Assembly	27
Chlorine Sensor Preparation	27
Optional pH Sensors	28
Configuration	29
User Interface	29
Keys	29
Display	30
Software	31
Software Navigation	31
Measure Menu [MEASURE]	33
Calibration Menu [CAL]	34
Configuration Menu [CONFIG]	35

Control Menu [CONTROL]	39
Diagnostics Menu [DIAG]	42
Calibration	44
Chlorine Calibration	44
Chlorine Zero Cal	44
Chlorine Span Cal	45
Temperature Calibration	46
pH Calibration	46
Two-Point pH Cal	47
One-Point pH Cal	47
Adjusting pH Compensation Curve	48
Modifying pH Correction Values	48
pH Correction – Table Modification Example	50
Storing Modified Table	50
PID Controller Details	51
PID Description	51
PID Algorithm	51
Q46H ISA PID Equation	51
Classical PID Tuning	52
Manual PID Override Control	53
Common PID Pitfalls	53
System Maintenance	54
General	54
Analyzer Maintenance	54
Sensor Maintenance	54
Sensor Acid Cleaning	55
Q22P Sensor Cleaning	55
Replacing the Saltbridge and Reference Buffer Solution	56
Flowcell Maintenance	56
Troubleshooting	57
General	57
External Sources of Problems	57
Analyzer Tests	58
Display Messages	59
Sensor Tests	60
Troubleshooting (Q22P Sensor)	61
Spare Parts	62

INTRODUCTION

General

The Model Q46H/62 is a versatile online monitoring system designed for the continuous measurement of free chlorine in solution. The full scale operating range of the system is user selectable for 0...200.0 ppb, 0...2.000 ppm, 0...20.00 ppm or 0...200.0 ppm, and the sensing system operates on water streams with temperatures from 0...55° C. The Q46H/62 Free Chlorine Measurement System is well-suited for potable water treatment, cooling water, sea water, produce wash water, reverse osmosis membrane protection or activated carbon filter break-through detection.

The basic sensing element used in the free chlorine monitor is a polarographic membrane sensor which measures chlorine directly. Water simply flows past the sensor and directly to drain, with the flow rate and pressure across the sensor controlled by a constant-head flow cell assembly. The chlorine measurement does not alter the sample or add any chemicals to the sample stream, so the water flow can return to the system if desired. Sensors operate on all kinds of samples from very low conductivity water up to sea water and brine solutions.

Q46H/62 monitors are available in two basic electronic versions: a 90...260V AC powered monitor or a 12...24V DC powered monitor—both with three relays and two 4...20 mA analog outputs. Both versions allow flexible output options which include additional 4...20 mA current outputs, additional 0...30V signal relays, PID control and digital communication cards.

In addition to normal chlorine measurement, the Q46H/62 is also available with an optional pH input which provides a two-parameter monitoring system. Both free chlorine and pH are displayed simultaneously, and the free chlorine value is automatically compensated for pH changes.

Standard System

The standard model Q46H/62 system includes three main components: the Q46H analyzer, a constant-head flow cell and a free chlorine sensor. A sealed flow cell is also available for applications where sample flow rate and pressure can be carefully controlled. *Figure 1 on page 6* shows a typical installation including the optional part number 07-0096 pH sensor.

For connection of the sensor to the electronics, a 25 ft cable is supplied. An additional 100 ft of interconnect cable may be added using part number 07-0100 junction box. All required spare parts are also provided with the basic system, including spare membranes, electrolyte, O-rings and any special hardware.

NOTE: Standard 25 ft sensor cables for both chlorine and optional pH sensors can be cut to a shorter length. Cutting the cables does not affect performance, and elimination of extra cable can sometimes eliminate electrical noise pickup through the cables.


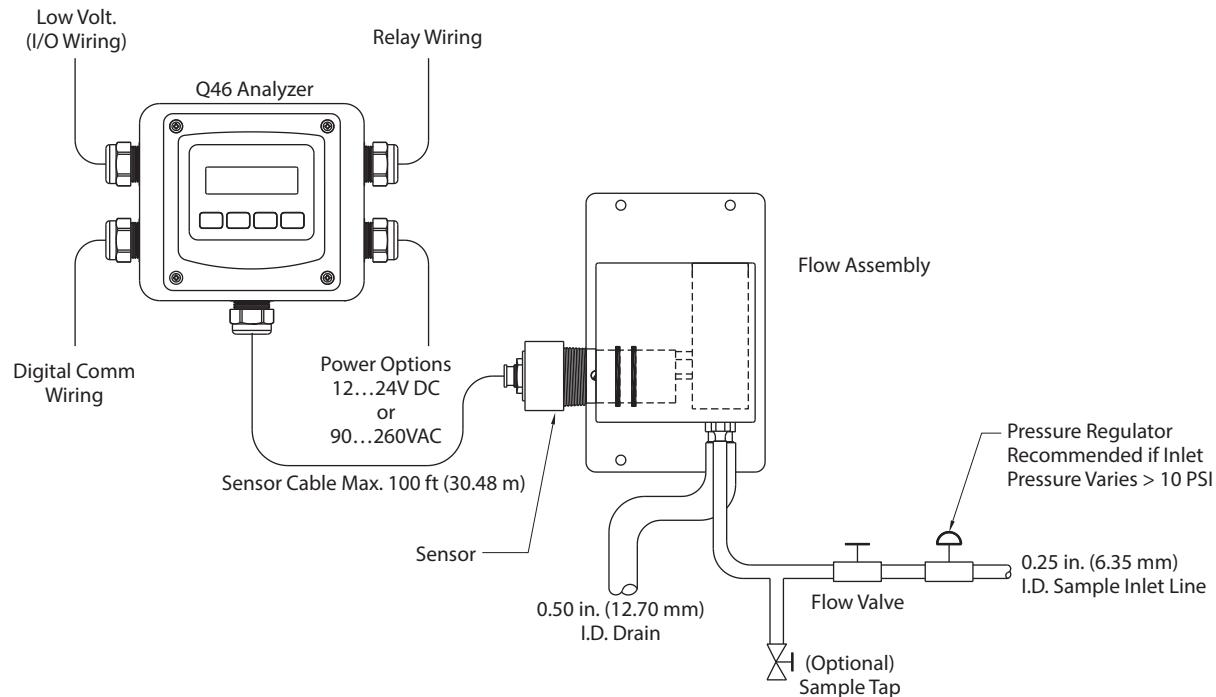


Figure 1: Typical chlorine monitoring system

Figure 2 shows the same standard flow cell assembly and chlorine sensor along with the conventional type pH sensor. A special adapter is required to hold the pH sensor in its proper location in the flow cell inlet chamber.

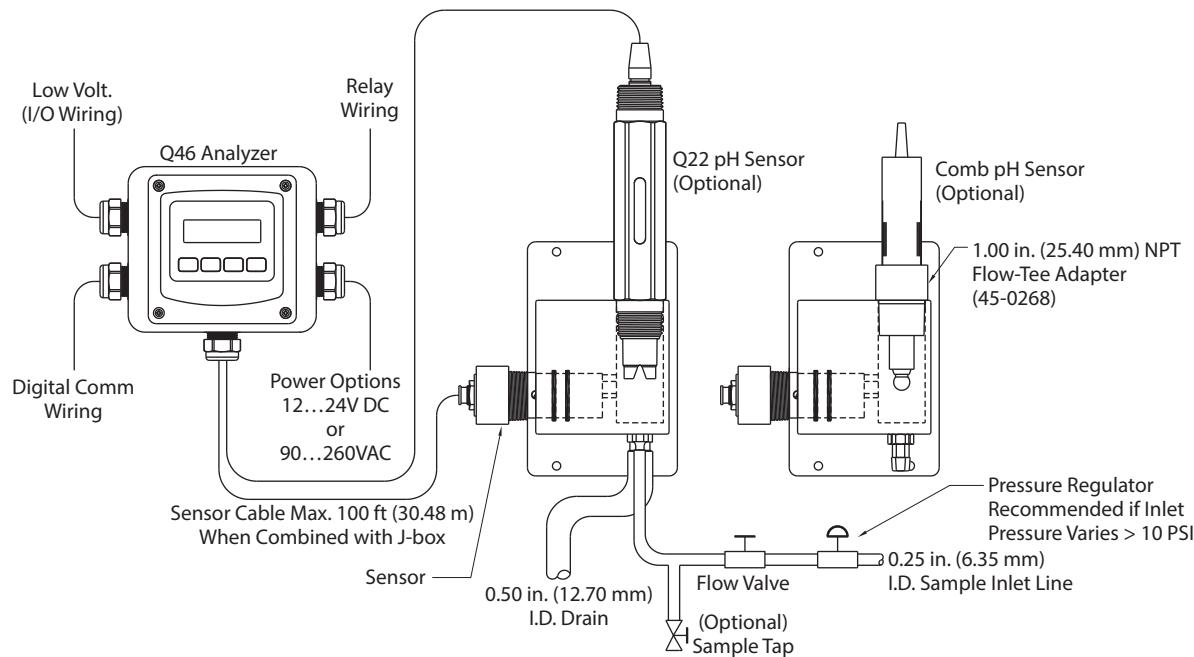

NOTE: Max sensor length 25 ft (7.62 m) with this flow cell configuration.

Figure 2: Chlorine system with conventional pH style sensor

Figure 3 shows an installation using a 00-1522 sealed flow cell for the chlorine sensor and a 00-1527 sealed flow cell for the pH sensor. This type of installation requires careful flow control. We recommend the use of our 03-0372 flow control assembly when using sealed flow cells. This assembly consists of an in-line filter and a fixed-flow regulator which maintains a constant 400 cc/min. flow rate through the system. This flow is maintained so long as inlet pressures are between 5...125 PSIG. The in-line filter is used mainly to protect the flow control element against larger particles that might cause plugging of the device.

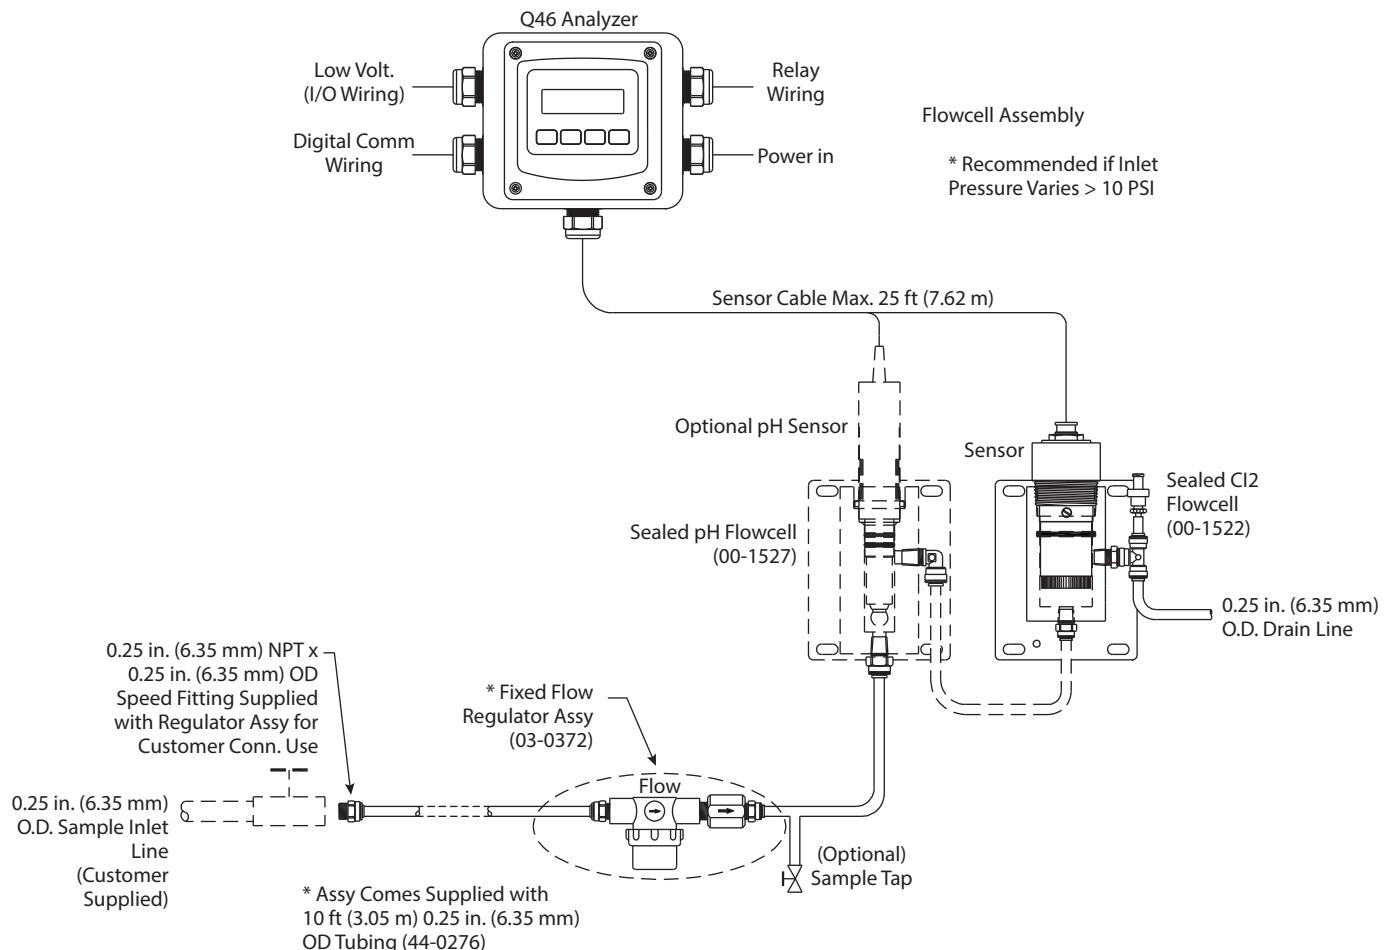


Figure 3: Sealed flow cell assemblies with flow control

Features

- Available in either 90...260VAC or 12...24V DC power supply systems. All features remain the same in both variations.
- High accuracy, high sensitivity system, measures from 20 ppb...200.0 ppm through 4 internal automatic ranges. User ranges of 200.0 ppb, 2,000 ppm, 20.00 ppm or 200.0 ppm.
- *Output Hold, Output Simulate, Output Alarm and Output Delay* functions. All forced changes in output condition include bumpless transfer to provide gradual return to online signal levels and to avoid system control shocks on both analog outputs.
- Three 6 amp SPDT relay outputs and two analog 4...20 mA outputs are standard. Software settings for relay control include setpoint, deadband, phase, delay and failsafe. An optional 3-relay card, for 0...30V signals, is available to bring the total to 6 relays.
- Selectable PID controller on main analog output. PID controller can operate with instrument configured as loop-power analyzer or as one of the two outputs on the AC powered instrument. PID includes manual operation feature, and diagnostic "stuck-controller" timer feature for alarm output of control problems.
- Digital communication option for Profibus-DP, Modbus-RTU, Modbus TCP/IP, Ethernet-IP. See Q46 Digital Communications Manual for Specifications.
- Two analog outputs may be configured to track chlorine and temperature, chlorine and chlorine or chlorine and pH. Both analog outputs can be individually programmed to fail to specific values. An optional third analog output is available, providing separate outputs for chlorine, pH and temperature.
- Selectable automatic pH compensation feature. Enables active pH compensation of free chlorine readings—requiring no pumps or buffers to maintain a constant pH level. The pH reading can also be sent to one of the analog outputs for complete pH + chlorine monitoring. The pH correction can be done using Badger Meter's optional pH sensor or using an input signal of 0.4...2.0V DC (4...20 mA across a 100 Ohms resistor) from another pH monitor. Input from another monitor requires the use of a loop isolator.
- Selectable Output Fail Alarm feature allows system diagnostic failures to be sent to external monitoring systems.
- Diagnostic messages provide a clear description of any problem with no confusing error codes to look up. Messages are also included for diagnosing calibration problems.
- Quick and easy one-point calibration method and sensor zero-cal. To provide high accuracy, all calibration methods include stability monitors that check temperature and main parameter stability before accepting data.
- High accuracy three-wire Pt100 temperature input. Temperature element can be user calibrated.
- Security lock feature to prevent unauthorized tampering with analyzer settings. All settings can be viewed while locked, but they cannot be changed.



Equipment bearing this marking may not be discarded by traditional methods in the European community after August 12, 2005, per EU Directive 2002/96/EC. End users must return old equipment to the manufacturer for proper disposal.

Q46H/62 System Specifications

Displayed Parameters	Main input, 0.1 ppb (0.0001 ppm)...200.0 ppm Sensor temperature, -5...55° C (23...131° F) Sensor Current, 0.0...999.9 nA, 0.000...99.99 µA Loop current, 4.00...20.00 mA Sensor slope/offset Model number and software version PID Controller Status Optional pH Input value, 0.00...14.00 pH
Main Parameter Ranges	Manual selection of one of the following ranges: 0.000...200.0 ppb 0.0...2.000 ppm 0.00...20.00 ppm 0.00...200.0 ppm
Display	0.75 in. (19.05 mm) high 4-digit main display with sign 12-digit secondary display, 0.30 in. (7.62 mm) 5 x 7 dot matrix Integral LED back-light for visibility in the dark
Keypad	4-key membrane type with tactile feedback, polycarbonate with UV coating
Weight	2.0 lb (0.91 kg)
Ambient Temperature	Analyzer Service, -4...140° F (-20...60° C) Sensor Service, 23...131° F (-5...55° C) Storage, 23...158° F (-5...70° C)
Ambient Humidity	0...95%, indoor/outdoor use, non-condensing to rated ambient temperature range
Altitude	Maximum 2000 m (6562 ft)
Electrical Certification	Ordinary location, CSA _{us} (CSA and UL standards—both approved by CSA), pollution degree 2, installation category 2
EMI/RFI Influence	Designed to EN 61326-1
Output Isolation	600V galvanic isolation
Filter	Adjustable 0...9.9 minutes additional damping to 90% step input
Temperature Input	Pt100 RTD, 3-wire type
Sensor	2-electrode polarographic membranized sensor for direct measurement of chlorine
Sensor Materials	Noryl and stainless steel
Sensor Cable	25 ft (7.62 m) cable with 6-pin plug.
Max. Sensor-to-Analyzer Distance	100 ft (30.48 m), with junction box
Optional pH Comp Input	Accepts standard combination or Q22P pH Sensors
Flow cell	Constant-head overflow, clear cast acrylic, 7...30 GPH, 15 GPH recommended, inlet is 1/4 in. hose barb at 1/8 in. MNPT, outlet is 1/2 in. hose barb at 3/8 in. MNPT
Power	90...260VAC, 50...60 Hz, 10 VA max 12...24V DC, 500 mA max.
Enclosure	NEMA 4X, polycarbonate, stainless steel hardware HWD: 4.90 in. (124.46 mm) x 4.90 in. (124.46 mm) x 5.50 in. (139.70 mm)
Mounting Options	Wall or pipe mount bracket standard. Bracket suitable for either 1.50 in. or 2 in. I.D. U-bolts for pipe mounting Panel mount adapter optional
Conduit Openings	Five 1/2 in. NPT openings. Adapter can be removed to provide a 1 in. NPT opening in the bottom of the enclosure. Gland seals provided but not installed
Relays, Electromechanical	Three SPDT, 6 amp @ 250VAC, 5 amp @ 24V DC contacts. Software selection for setpoint, phase, delay, deadband, hi-lo alarm and failsafe. A-B indicators on main LCD and C indicator on lower display
Analog Outputs	Two 4...20 mA outputs. Output one programmable for ppm chlorine or PID. Output 2 programmable for ppm chlorine, temperature or pH. Max load 500 Ohms for each output. Outputs ground isolated and isolated from each other. An additional 3rd analog option is available

Q46H/62 Performance Specifications

Accuracy	0.5% of selected range or 0.02 ppm
Repeatability	0.3% of selected range or 0.01 ppm
Sensitivity	0.05% of selected range
Non-Linearity	0.1% of selected range
Warm-Up Time	3 seconds to rated performance (electronics only)
Supply Voltage Effects	$\pm 0.05\%$ span
Instrument Response Time	60 seconds to 90% of step input at lowest damping

ANALYZER MOUNTING

General

All Q46 Series instruments offer maximum mounting flexibility. A bracket is included with each unit that allows mounting to walls or pipes. In all cases, choose a location that is readily accessible for calibrations. Also consider that it may be necessary to use a location where solutions can be used during the calibration process. To take full advantage of the high contrast display, mount the instrument in a location where the display can be viewed from various angles and long distances.

Locate the instrument in close proximity to the point of sensor installation—this allows easy access during calibration. The sensor-to-instrument distance should not exceed 100 ft. To maximize signal-to-noise ratio, work with the shortest sensor cable possible. The standard cable length of the chlorine sensor is 25 ft.

See [Figure 4](#) for overall dimensions of the Q46 monitor.

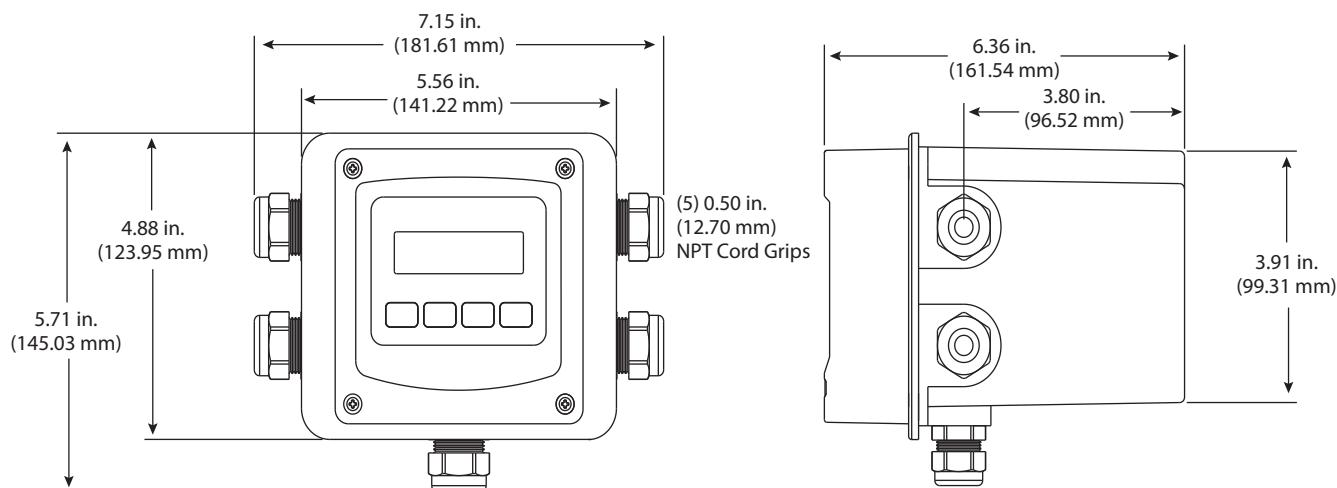


Figure 4: Q46 enclosure dimensions

Wall or Pipe Mount

A PVC mounting bracket with attachment screws is supplied with each analyzer (see [Figure 5](#) for dimensions). The multipurpose bracket is attached to the rear of the enclosure using the four flat head screws. The instrument is then attached to the wall ([Figure 6 on page 13](#)) using the four outer mounting holes in the bracket. These holes are slotted to accommodate two sizes of U-bolts that may be used to pipe mount the unit ([Figure 7 on page 13](#)). Slots accommodate U-bolts designed for 1-1/2 in. or 2 in. pipe. The actual center to center dimensions for the U-bolts are shown in [Figure 5](#).

NOTE: These slots are for U-bolts with 1/4-20 threads. The 1-1/2 in. pipe U-bolt (2 in. I.D. clearance) is available from Badger Meter in type 304 stainless steel under part number 47-0005.

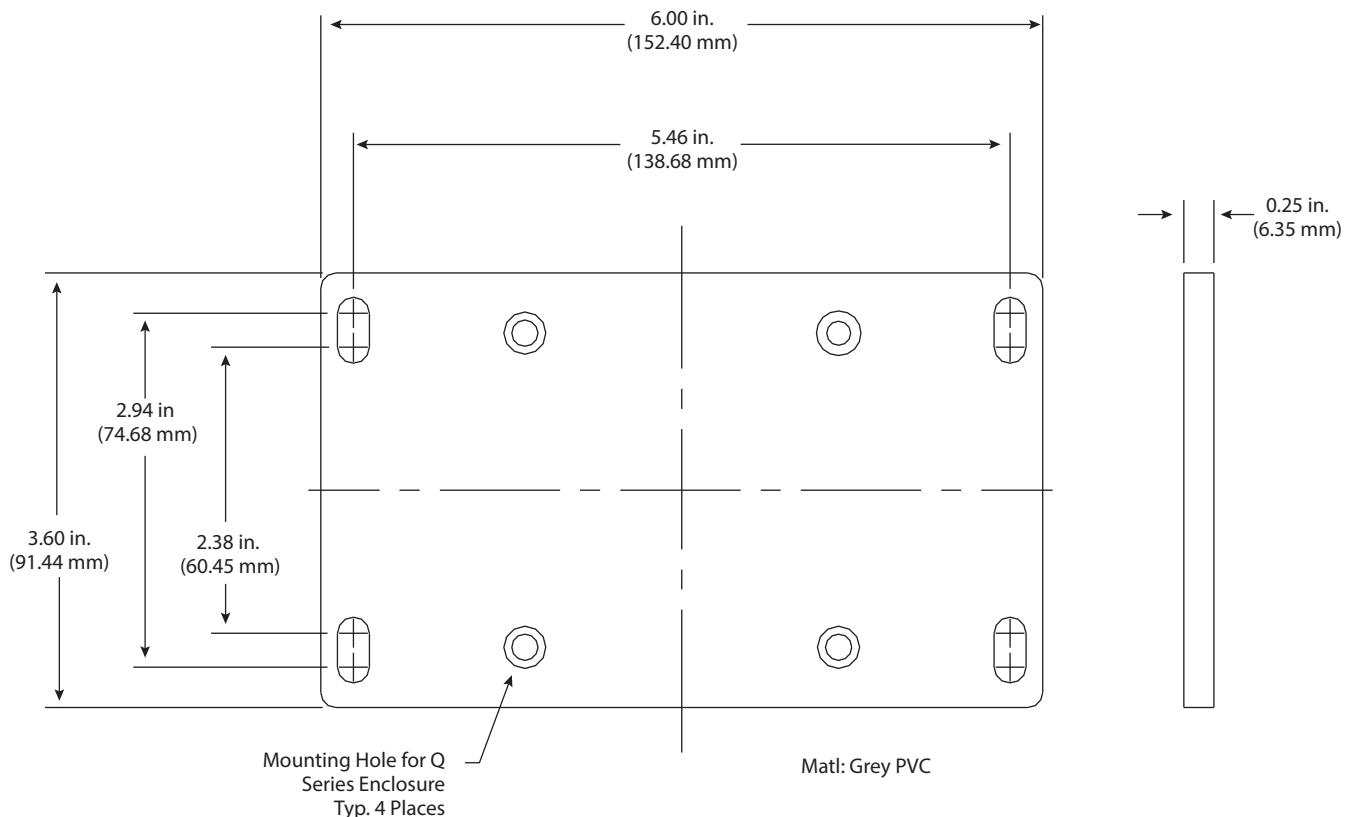


Figure 5: Wall or pipe mount bracket

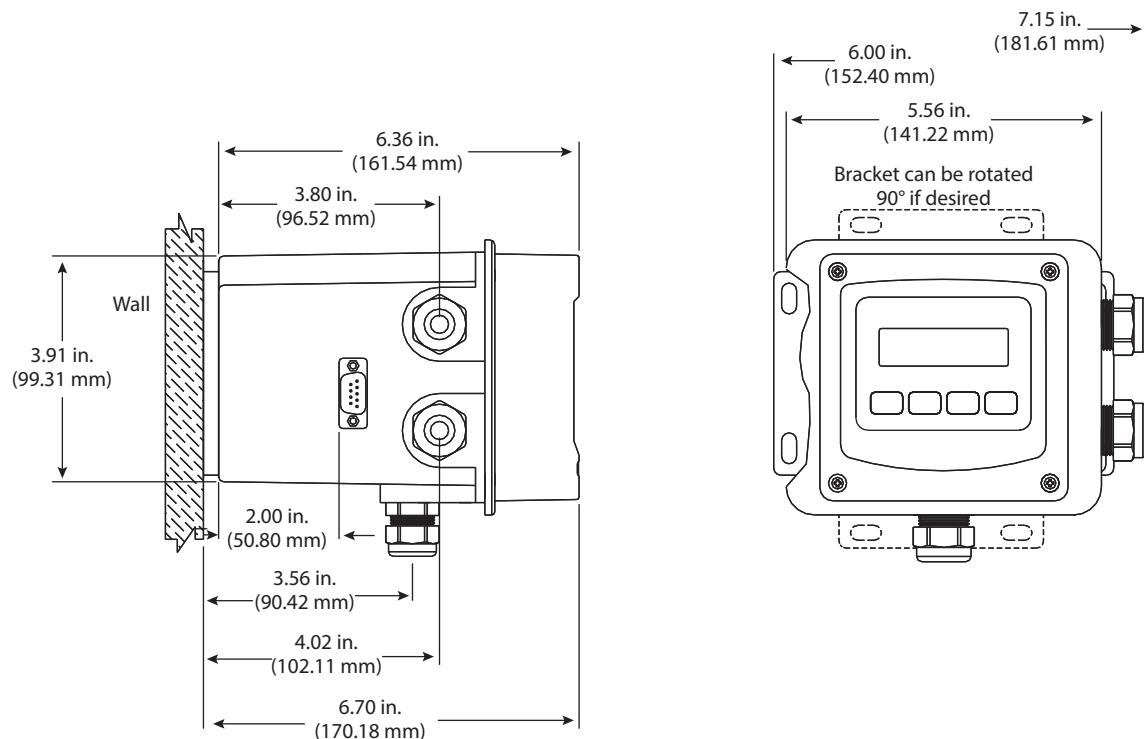


Figure 6: Wall mounting diagram

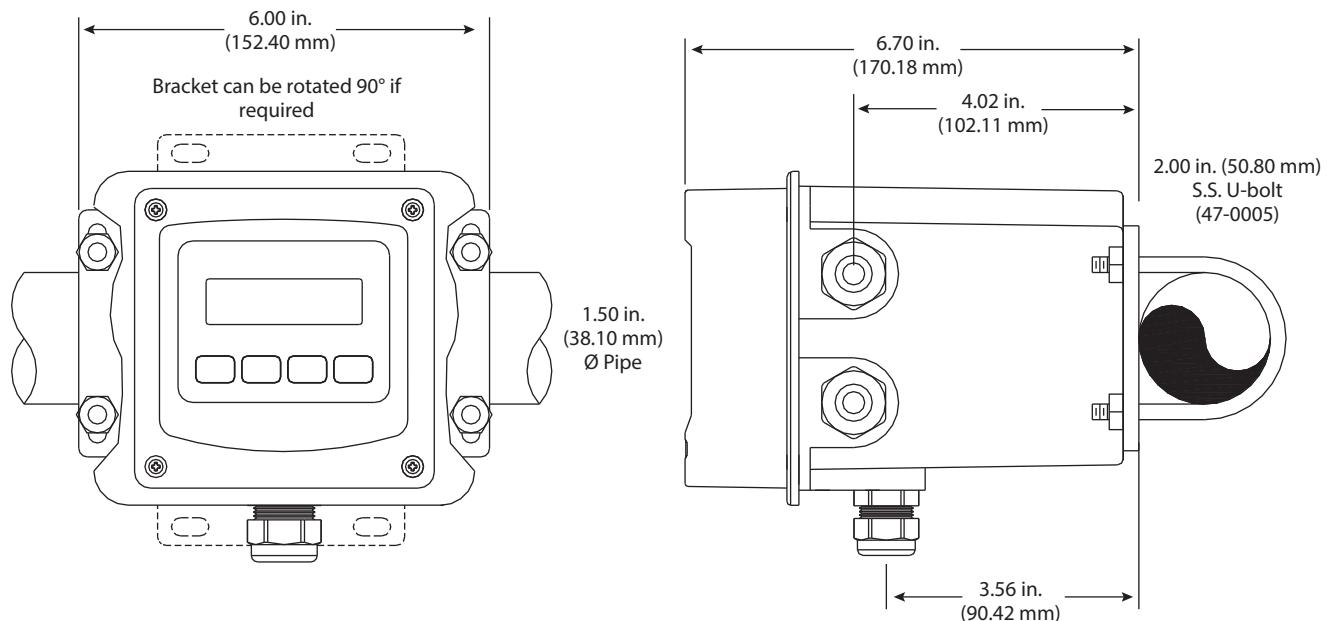


Figure 7: Pipe mounting diagram

Panel Mounting

Panel mounting uses the panel mounting flange molded into the rear section of the enclosure. *Figure 8* provides dimensions for the panel cutout required for mounting.

The panel mounting bracket kit must be ordered separately (part number 05-0094). This kit contains a metal retainer bracket that attaches to the rear of the enclosure, 4 screws for attachment of this bracket and a sealing gasket to ensure that the panel mounted monitor provides a water tight seal when mounted to a panel.

The sealing gasket must first be attached to the enclosure. The gasket contains an adhesive on one side so that it remains in place on the enclosure. Remove the protective paper from the adhesive side of the gasket and slide the gasket over the back of the enclosure so that the adhesive side lines up with the back of the enclosure flange. Once in place, you can proceed to mount the monitor in the panel.

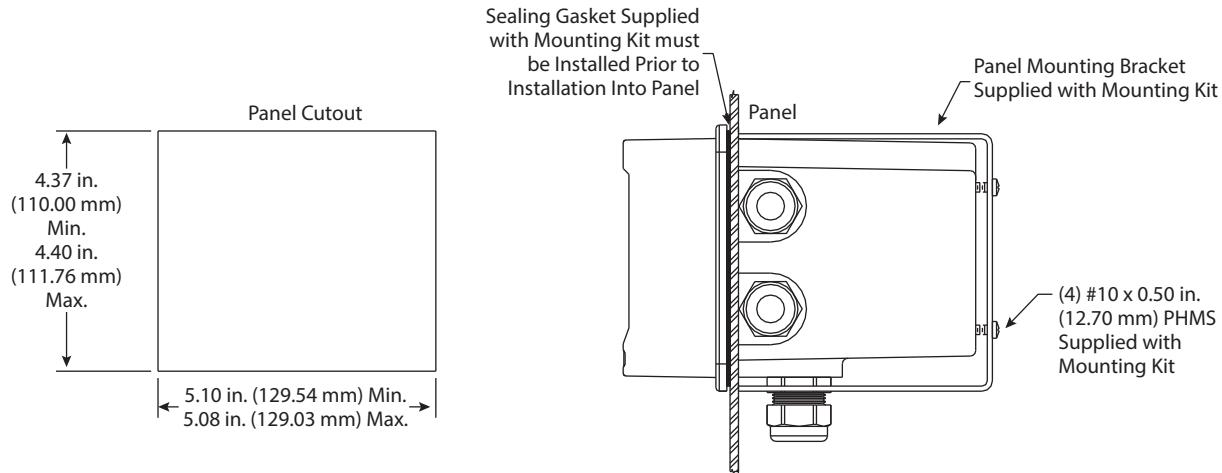


Figure 8: Panel mount cutout

SENSOR/FLOW CELL MOUNTING

General

Select a location within the maximum sensor cable length for mounting of the sensor flow cell.

Constant-Head Flow cell

Free chlorine sensors are best used in a constant-head overflow chamber because variations in sample flow rate and pressure can cause unstable readings. When monitoring low concentrations (below 0.5 ppm), this method should always be used.

Mechanical installation of the flow cell requires that it be mounted to a wall or other convenient flat surface. Alternatively, the mounting holes on the plate accommodate a 2 in. U-bolt for mounting the plate to a 2 in. pipe. *Figure 9* shows the dimensions and mounting hole locations for the flow cell. Be sure to allow enough clearance on the left side of the flow cell for insertion and removal of the sensor. About 12 in. clearance is recommended.

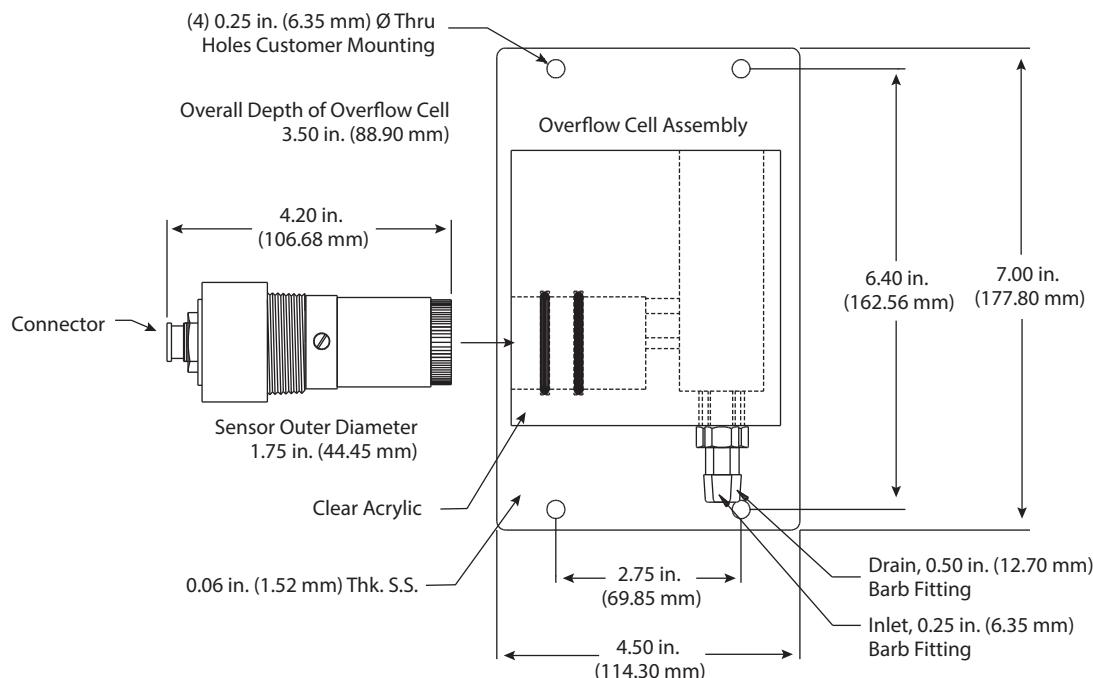


Figure 9: Constant-head flow cell details

Once mounted, inlet and drain connections must be made. The flow cell contains a 1/8 in. MNPT inlet connection and a 3/8 in. MNPT drain connection. Hose barbs for the inlet and drain connections are supplied with the flow cell for use with flexible tubing. The inlet hose barb is used with 1/4 in. I.D. tubing and the drain hose barb is used with 1/2 in. I.D. tubing.

Sealed Flow cells

Applications where the sample inlet flow is well controlled can use a simpler sealed flow cell. Using this flow cell requires that flow be controlled externally to about 400 cc/min. Variable flow rate or variable pressure causes unstable readings in this flow cell. Badger Meter offers a special flow control element that can be used ahead of this flow cell on the incoming sample line. The flow control is part number (55-0048). It controls the inlet flowrate at 400 cc/min. with inlet pressure variations from 5...150 PSIG. A 50 micron y-strainer ahead of the flow control element is recommended. The sealed flow cell provides a drain vent with check valve to avoid pulling a vacuum on the flow chamber.

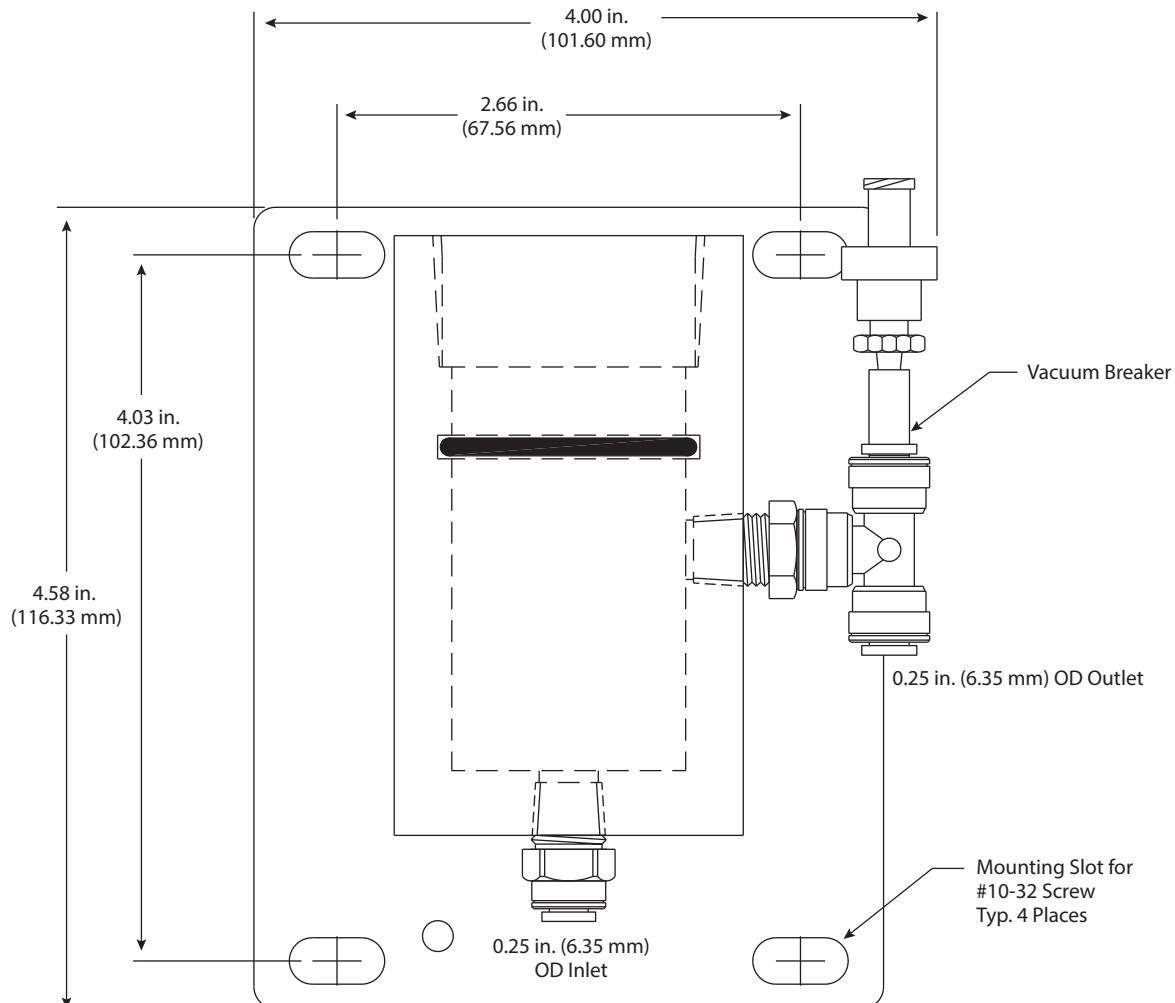


Figure 10: Sealed Cl_2 flow cell details

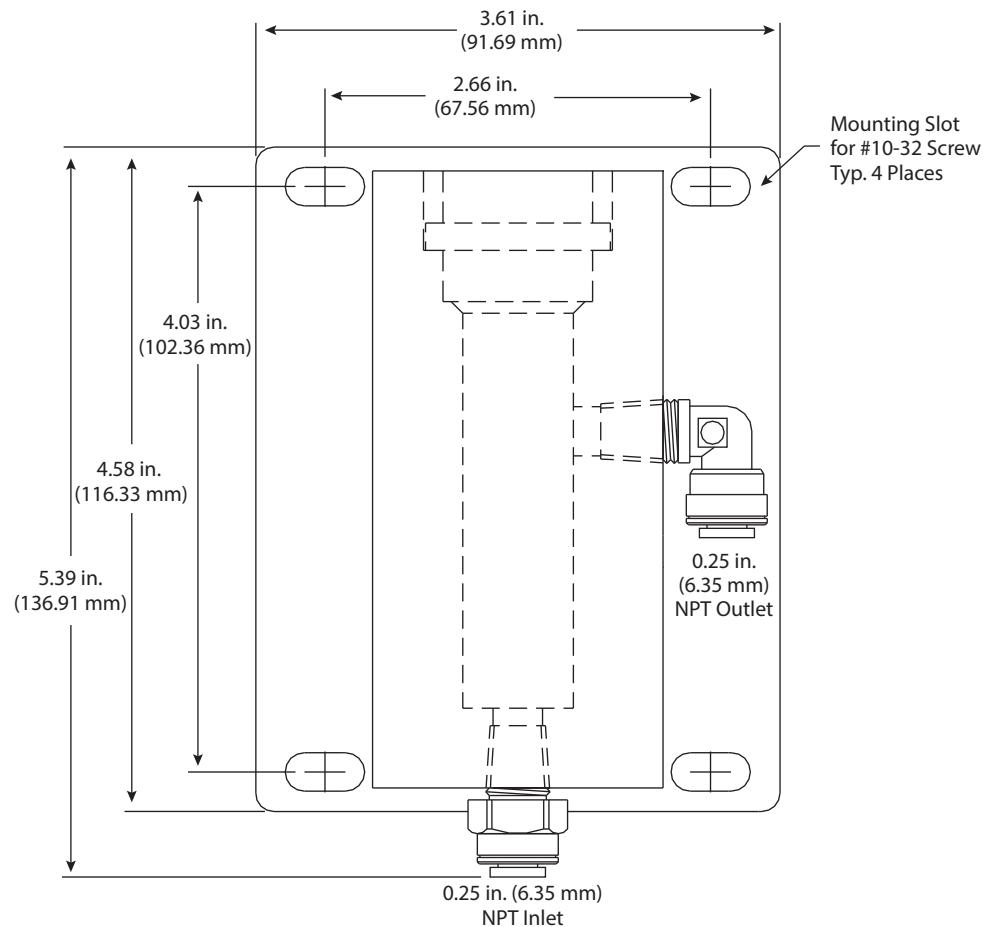


Figure 11: Sealed pH flow cell details

ELECTRICAL INSTALLATION

General

The Q46 is powered in one of two ways, depending on the version purchased. The 12...24V DC powered analyzer requires a customer supplied DC power supply. The 90...260VAC version requires line power. Please verify the type of unit before connecting any power.

WARNING

DO NOT CONNECT AC LINE POWER TO A 12...24V DC POWERED UNIT. SEVERE DAMAGE COULD RESULT.

IMPORTANT NOTES:

1. Use wiring practices that conform to all national, state and local electrical codes. For proper safety as well as stable measuring performance, it is important that the earth ground connection be made to a solid ground point from TB7. The AC power supply contains a single 630 mA slo-blo fuse (Wickmann #372-0630). The fuse **F1** is located adjacent to **TB7** and is easily replaceable.
2. Do NOT run sensor cables or instrument 4...20 mA output wiring in the same conduit that contains AC power wiring. AC power wiring should be run in a dedicated conduit to prevent electrical noise from coupling with the instrumentation signals.
3. This analyzer must be installed by specifically trained personnel in accordance with relevant local codes and instructions contained in this operating manual. Observe the analyzer's technical specifications and input ratings. Proper electrical disconnection means must be provided prior to the electrical power connected to this instrument, such as a circuit breaker—rated 250VAC, 2 A minimum. If one line of the line power mains is not neutral, use a double-pole main switch to disconnect the analyzer.
4. Repeated problems with lightning strikes damaging sensitive instrumentation are often attributed to poorly bonded earth grounds in the instrument power source. The protection schemes incorporated into this analyzer cannot operate to maximum efficiency unless the ground connection is at its absolute lowest impedance.

There is no standard ground resistance universally recognized. Many agencies recommend a ground resistance value of 5 Ohms or less. The NEC recommends an impedance to ground of less than 25 Ohms, and less than 5 Ohms where sensitive equipment is installed. Power sources feeding sensitive instruments like the Q46H/62 should have the lowest possible impedance to ground.

Power Connection

Verify the AC power supply requirement before installing. Also verify that power is fully disconnected before attempting to wire.

Q46 systems are supplied with 5 cable gland fittings for sealing cable entries.

Connect HOT, NEUTRAL and GROUND to the matching designations on terminal strip **TB7**.

⚠️ WARNING

DISCONNECT LINE POWER VOLTAGE BEFORE CONNECTING LINE POWER WIRES TO TERMINAL TB7 OF THE POWER SUPPLY. THE POWER SUPPLY ACCEPTS ONLY STANDARD THREE-WIRE SINGLE PHASE POWER. AC POWER SUPPLIES ARE CONFIGURED FOR 90...260VAC OPERATION AT THE FACTORY AT TIME OF ORDER, AND THE POWER SUPPLY IS LABELED AS SUCH. DO NOT CONNECT VOLTAGES OTHER THAN THE LABELED REQUIREMENT TO THE INPUT.

The two analog outputs for the standard system are present at terminal TB1. The loop-load limitation in this configuration is 500 Ohms maximum for each output.

NOTE: These two outputs are completely isolated from each other to ensure that ground loops do not result from the connection of both outputs to the same device such as a PLC or DCS.

A ribbon cable connects the power supply assembly with the microprocessor assembly located in the front section of the enclosure. This cable may be unplugged from the front section of the monitor if service is needed, but should normally be left in place during installation.

The power strip, **TB7**, allows up to 12 AWG wire. A wire gauge of 16 AWG is recommended to allow for an easy pass-through into the 1/2 in. NPT ports when wiring.

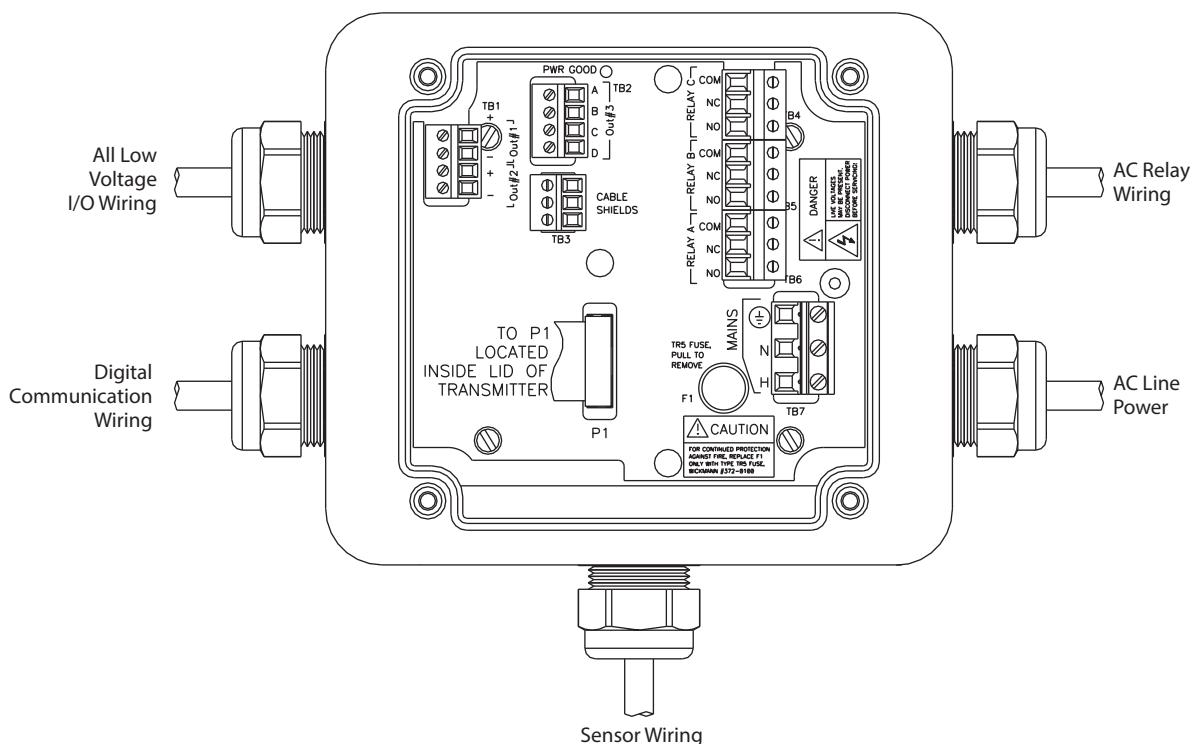


Figure 12: Line power connection

Relay Connection

Three SPDT relays are provided on the power supply board. None of the relay contacts are powered. The user must supply the proper power to the contacts. For applications that require the same switched operating voltage as the Q46 (115 or 230V), power may be jumpered from the power input terminals at **TB7**. Relay wiring is connected at **TB4**, **TB5** and **TB6** as shown in *Figure 13*.

NOTE: The relay contact markings are shown in the NORMAL mode. Programming a relay for "Failsafe" operation reverses the NO and NC positions in *Figure 13*.

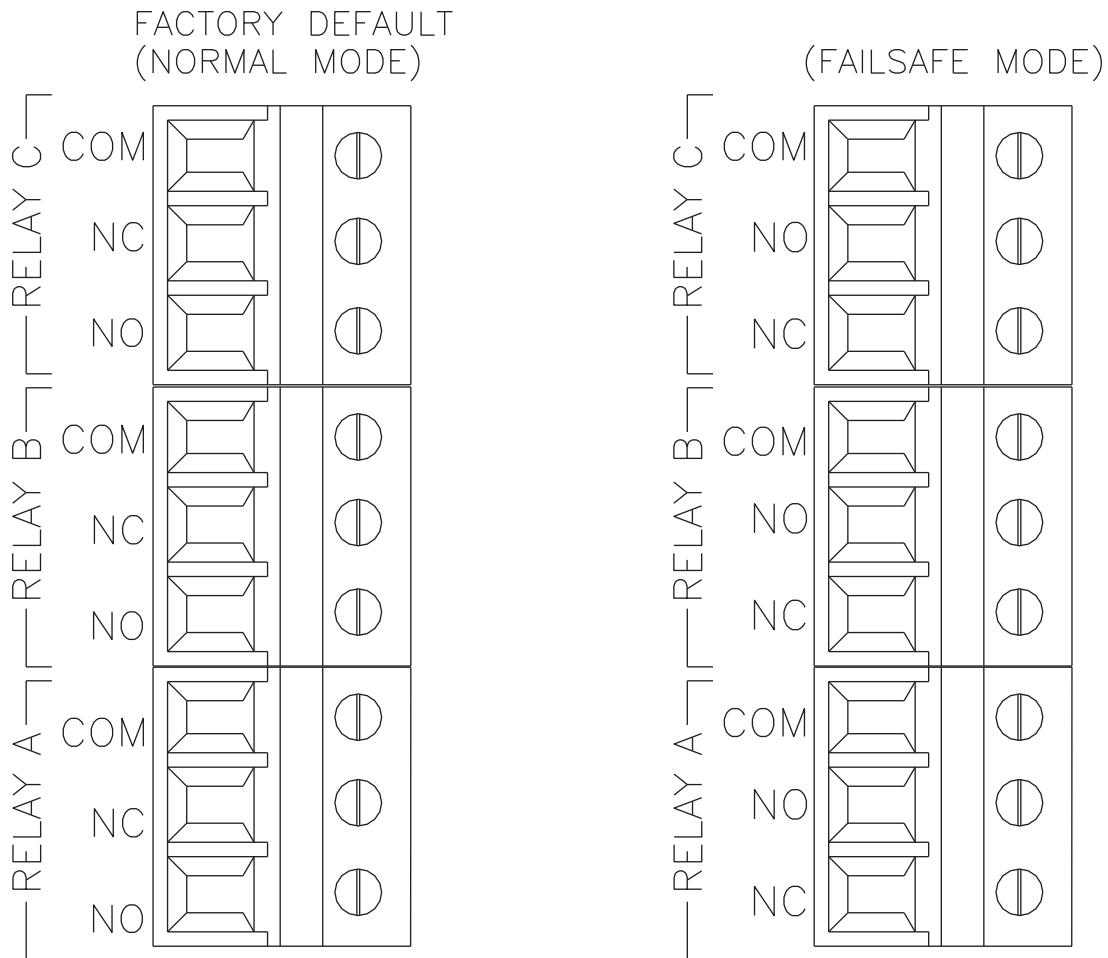


Figure 13: Optional relay board wiring

TB2, is used to connect to the optional 3-relay card (*Figure 14*) OR the optional third analog output Out#3, (*Figure 15*). The Q46 can be configured for only one of these optional features, and the hardware for either option must be factory installed.

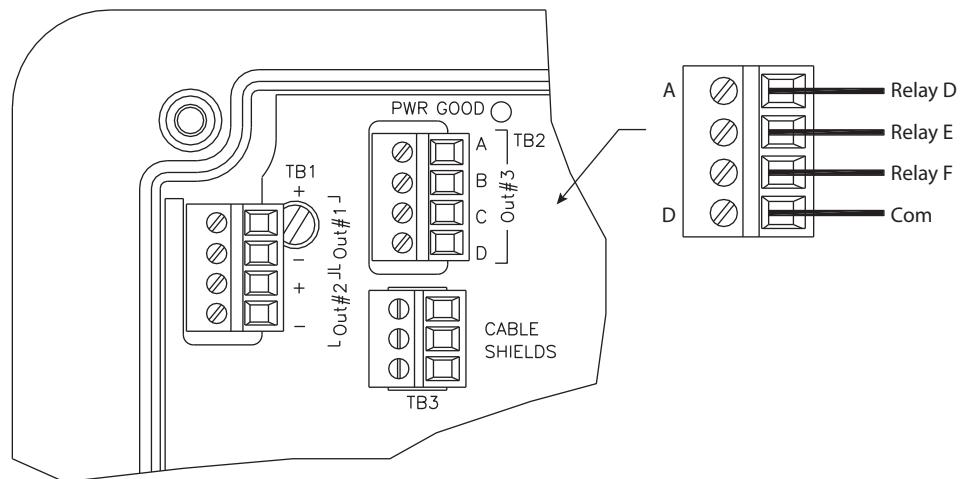


Figure 14: Optional relay board wiring

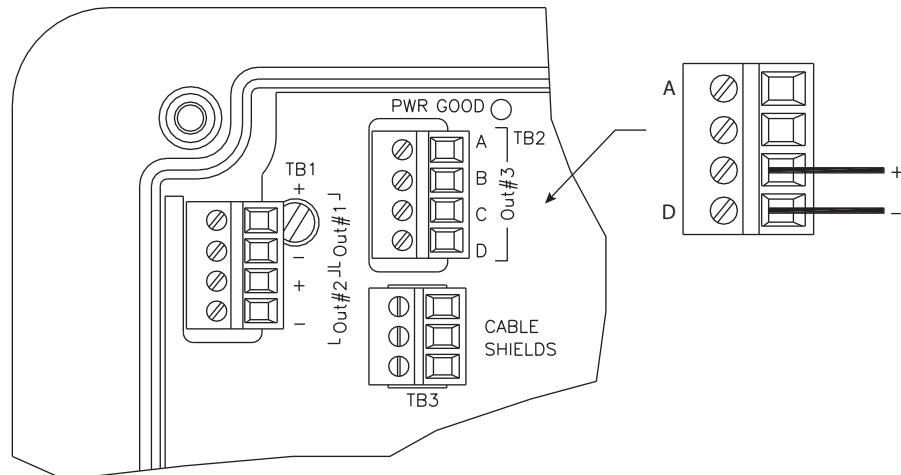


Figure 15: Optional analog output wiring

Direct Sensor Connection

The sensor cable can be routed into the enclosure through one of the cord grips supplied with the unit. Routing sensor wiring through conduit is only recommended if a junction box is to be used. Some loose cable is needed near the installation point so that the sensor can be inserted and removed easily from the flow cell.

Cord grips used for sealing the cable should be snugly tightened after electrical connections have been made to prevent moisture incursion. When stripping cables, leave adequate length for connections in the analyzer enclosure as shown

Figure 16. The standard 25 ft sensor cable normally supplied with the system is already stripped and ready for wiring. This cable can be cut to a shorter length if desired to remove extra cable in a given installation. Do not cut the cable so short as to make installation and removal of the sensor difficult.


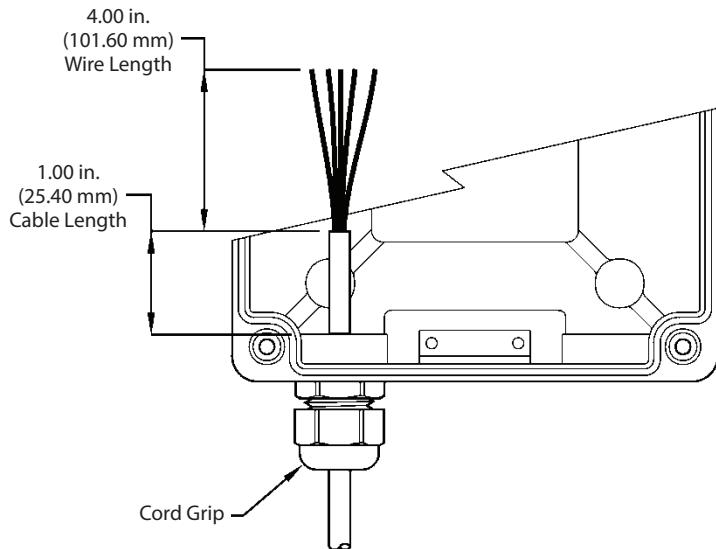


Figure 16: Sensor cable preparation

Sensor Wiring

The sensor cable can be quickly connected to the Q46 terminal strip by matching the wire colors on the cable to the color designations on the label in the monitor. A junction box is also available to provide a break point for long sensor cable runs. Route signal cable away from AC power lines, adjustable frequency drives, motors or other noisy electrical signal lines. Do not run sensor or signal cables in conduit that contains AC power lines or motor leads.

NOTE: If sensor is experiencing Low-Slope or Low-Output conditions due to poor earth ground connections, move the shield connection from P/S board to alternate location on lid, where indicated with an "S."

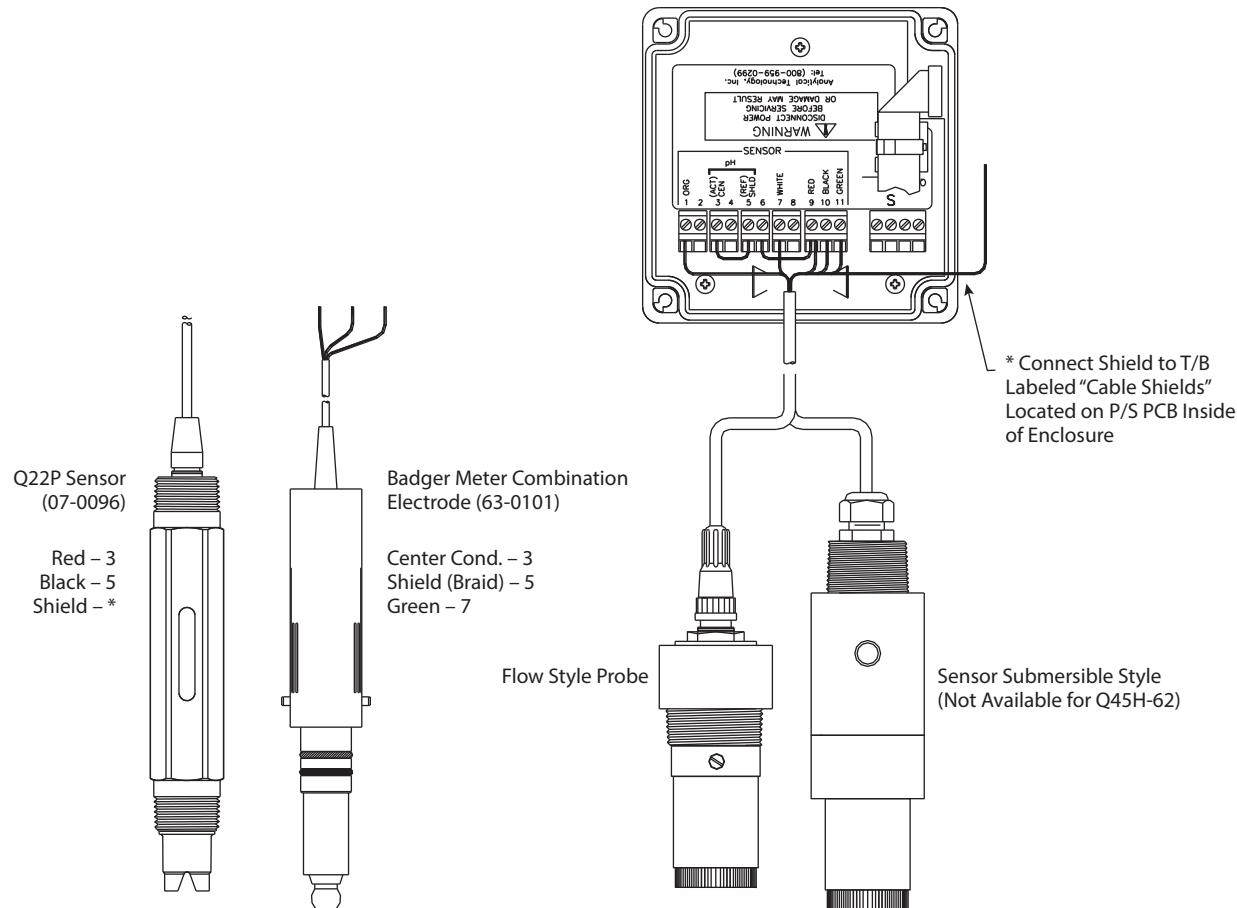


NOTE: The **BLUE** wire is **NOT** used when connecting a Flow Style Probe to the analyzer.

NOTE: pH compensation signal may be supplied from a separate isolated voltage input of 0.3...1.5V DC (75 Ohms resistance across a 4...20 output).

Figure 17: Direct sensor connection

Junction Box Connection

Installations where the sensor is to be located more than 25 ft from the monitor (max. 100 ft) require the use of a junction box. The junction box is shown in [Figure 18](#), and is supplied with two cable glands on the bottom of the enclosure.

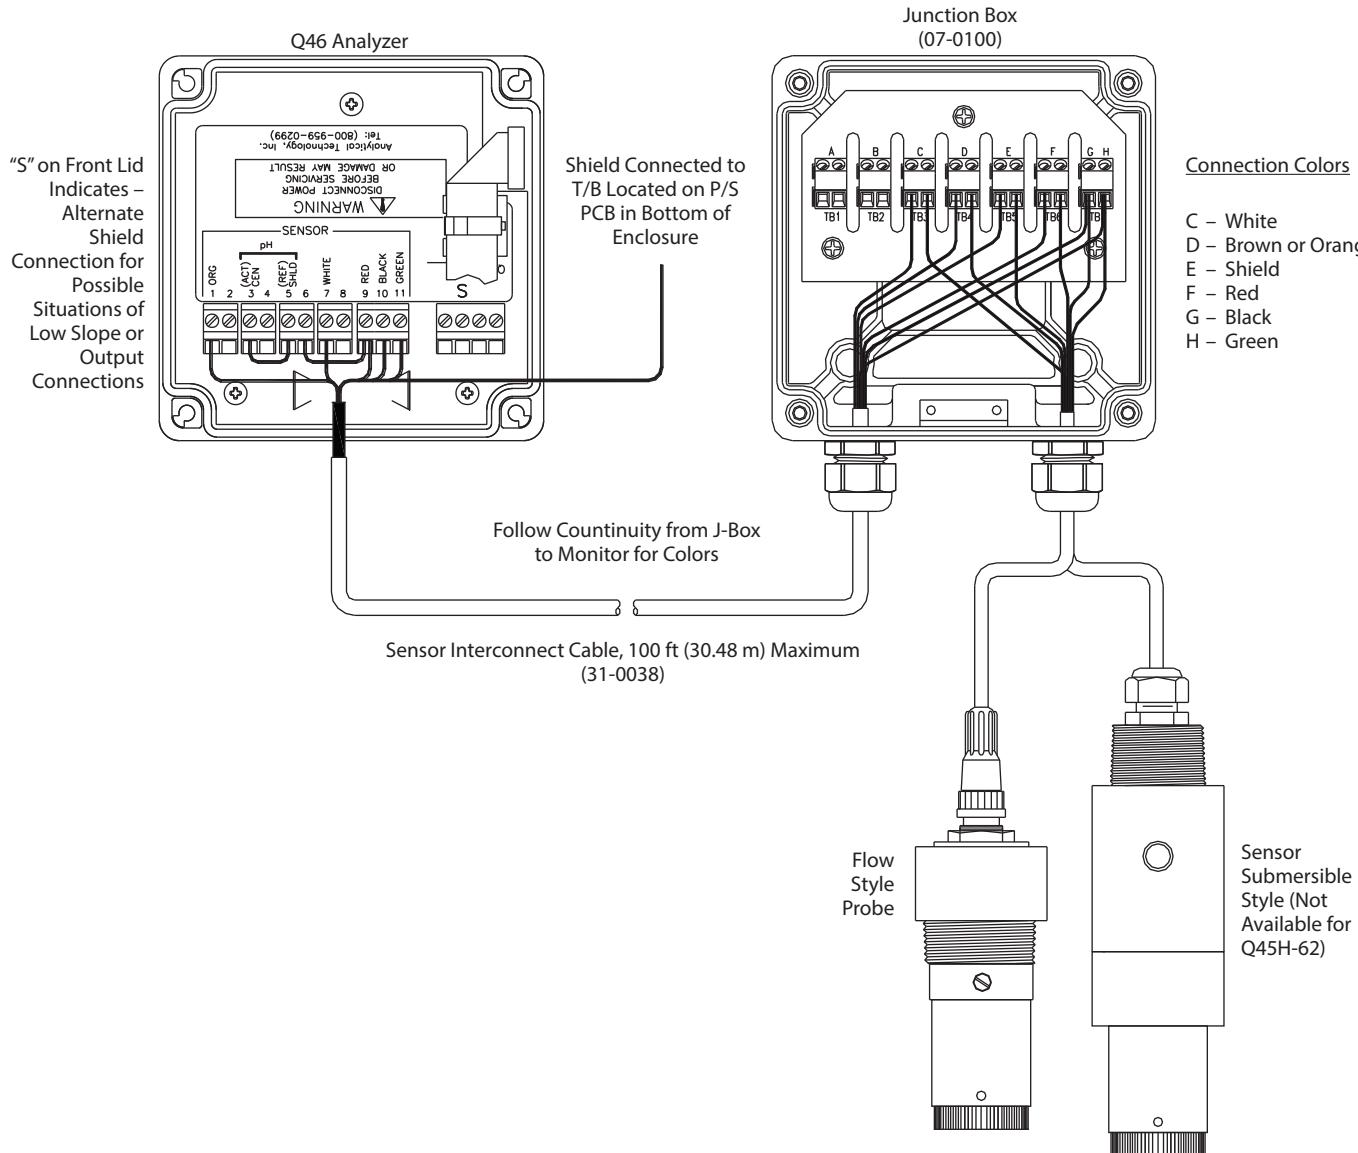

NOTE: The **BLUE** wire is **NOT** used when connecting a Flow or Submersible Style Probe to the analyzer.

Figure 18: Junction box interconnect wiring

Optional pH Compensation Input

The Q46H may be configured for pH compensation to maintain excellent accuracy in applications where the pH can vary. To use the feature, a pH sensor must be connected to Terminals 3 and 5 as shown [Figure 17 on page 23](#).

NOTE: Jumpers are installed at the factory between Terminals 3 and 5, and Terminals 6 and 9. When no pH sensor input is connected, these jumpers reduce the potential for noise pickup in the circuit. **Remove the jumpers if a pH sensor is added.**

Two types of pH sensors are available for connection to the Q46H/62 monitor. A battery powered sensor with internal preamp, part number 07-0096, provides an amplified signal of 0.3...1.5V DC. A standard pH sensor without preamp, part number 63-0101, is also available, but the maximum cable length for this sensor is 25 ft (7.62 m). When this sensor is used with the constant-head flow cell, an adapter is supplied to allow the sensor to sit in the inlet chamber.

The pH correction can also be done using the analog output of another pH analyzer. When using the output from a separate pH analyzer, signal isolation is critical and an isolator may be required for proper operation.

If pH compensation is to be used, the pH input feature must be enabled and the correct pH sensor type must be selected in the *Configuration* menu. If 63-0101 sensor is used, select **Sensor Type #1**. If you are using a 07-0096 sensor (Q22P) or an external pH analyzer input, select **Sensor Type #2**. See [Figure 19 on page 26](#) for sensor hook-up information.

NOTE: A junction box may not be used with a 63-0101 pH sensor.

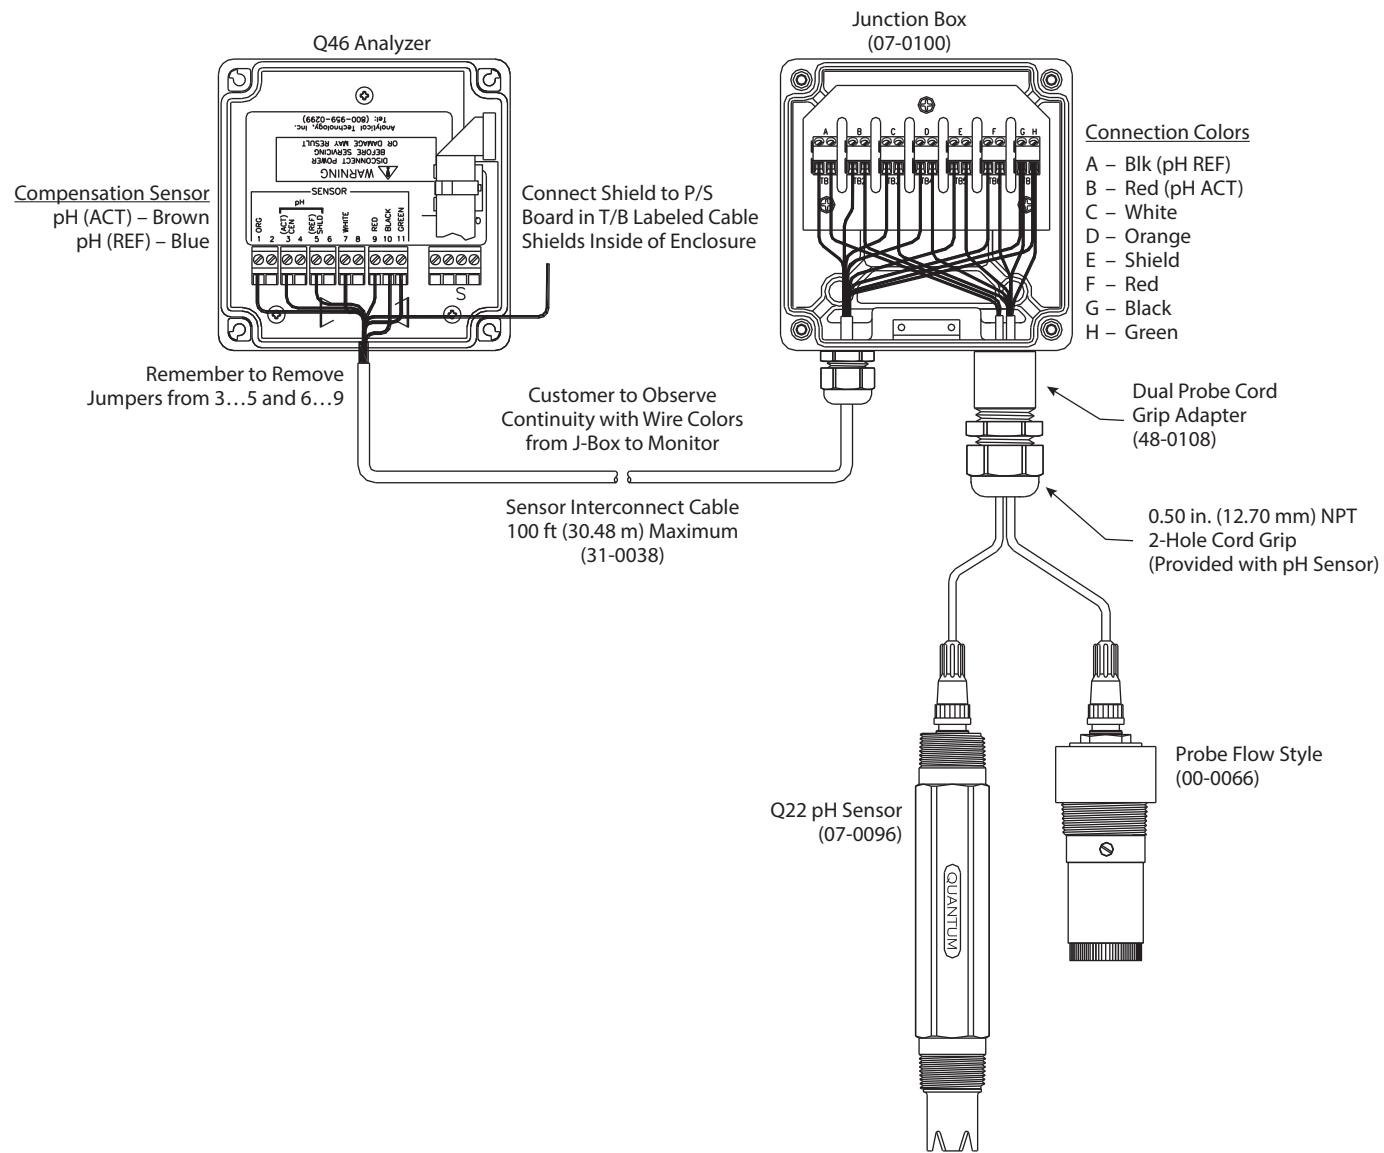


Figure 19: Junction box wiring with optional pH comp.

SENSOR ASSEMBLY

Chlorine Sensor Preparation

The chlorine sensor supplied with the Q46H is shipped dry. It does not operate until it is prepared by adding electrolyte and a membrane. Preparation of the sensor for operation must be done carefully. The procedure should be done by a qualified technician, and it should only be done when the system is ready for operation. Until then, it is best to leave the sensor in the condition in which it is received.

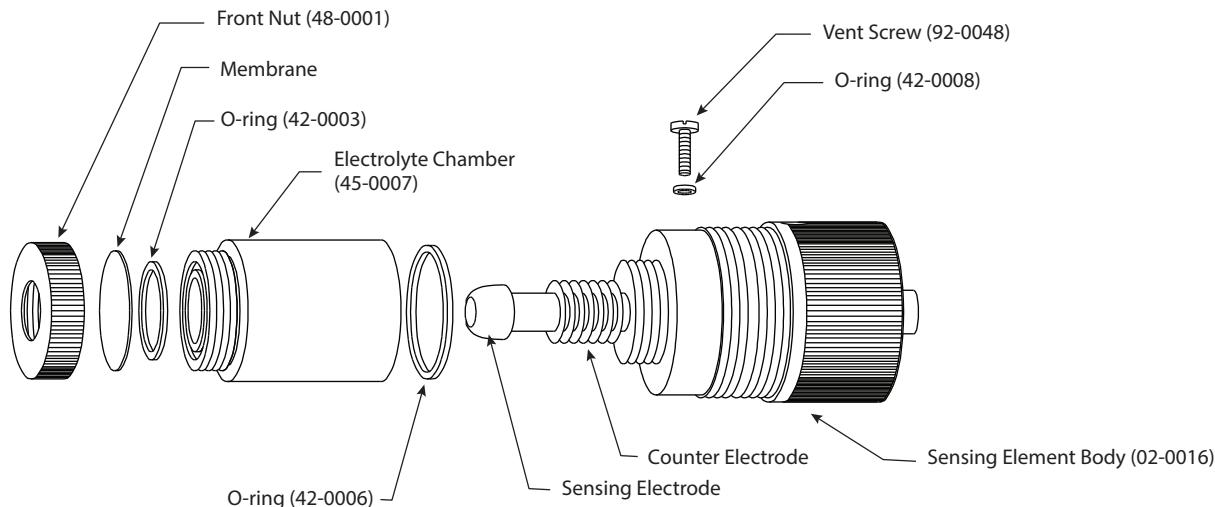


Figure 20: Chlorine sensor assembly

Follow the procedure below to prepare the chlorine sensor for operation:

1. Unscrew the electrolyte chamber from the assembled sensor and also remove the vent screw from the side of the sensor body.
2. Remove the front nut from the bottom of the chamber and discard the protective membrane. O-rings are contained in grooves on both the bottom and top of the chamber. Be sure that these O-rings remain in place.
3. From the package of membranes supplied with the sensor, place a new membrane into the front nut. The membrane is white in color and is separated from other membranes by a light blue paper spacer.
4. Screw the front nut on to the chamber until you feel the O-ring compress. Hand-tight compression is all that is needed. Do not use tools to tighten. The membrane should be flat across the bottom of the chamber without wrinkles.
5. Fill the chamber with electrolyte until the level reaches the bottom of the internal threads.
6. Slowly screw the chamber onto the sensor body. A small amount of electrolyte may run out of the hole from which the vent screw was removed. Place a paper towel around the sensor to absorb the electrolyte overflow. The electrolyte is harmless and does not irritate skin. Tighten the chamber until the O-ring at the top of the chamber is compressed. Once again, do not use tools to tighten.
7. Shake excess electrolyte from the fill hole on the side of the sensor and replace the vent screw.

The sensor is now ready for operation. The membrane should be stretched tightly across the tip of the sensor.

CAUTION:

WHEN HANDLING THE ASSEMBLED SENSOR, DO NOT SET THE SENSOR ON ITS TIP OR DAMAGE TO THE MEMBRANE COULD RESULT. SEVERE IMPACTS ON THE TIP OF THE SENSOR FROM DROPPING OR OTHER MISUSE MAY CAUSE PERMANENT DAMAGE TO THE SENSOR.

Optional pH Sensors

As mentioned previously, two optional pH sensors are available for use with the Q46H system, one battery powered and one without an internal preamp. The pH sensors may be used to simply provide for continuous monitoring of both free chlorine and pH, or they can be used to correct the free chlorine sensor reading for changes due to pH changes in the sample. Both sensors are shipped with a protective rubber boot containing a small amount of salt solution to keep the glass elements in good condition and ready for use.

No special preparations are required for use of these electrodes. The protective boot should remain in place until the system is ready for operation. **Do not remove the protective boot and allow the sensor to sit in the air for an extended period of time. The pH electrodes MUST remain wet.**

When ready for operation, simply remove the rubber boot from the end of the sensor and place the sensor into the inlet chamber of the chlorine overflow cell. It is placed directly above the sample inlet tube. You may need to slide the flow cell chamber cover out of the way to put the pH sensor in place.

CONFIGURATION

User Interface

The user interface for the Q46 Series instrument consists of a custom display and a membrane keypad. All functions are accessed from this user interface (no internal jumpers or pots, for example).

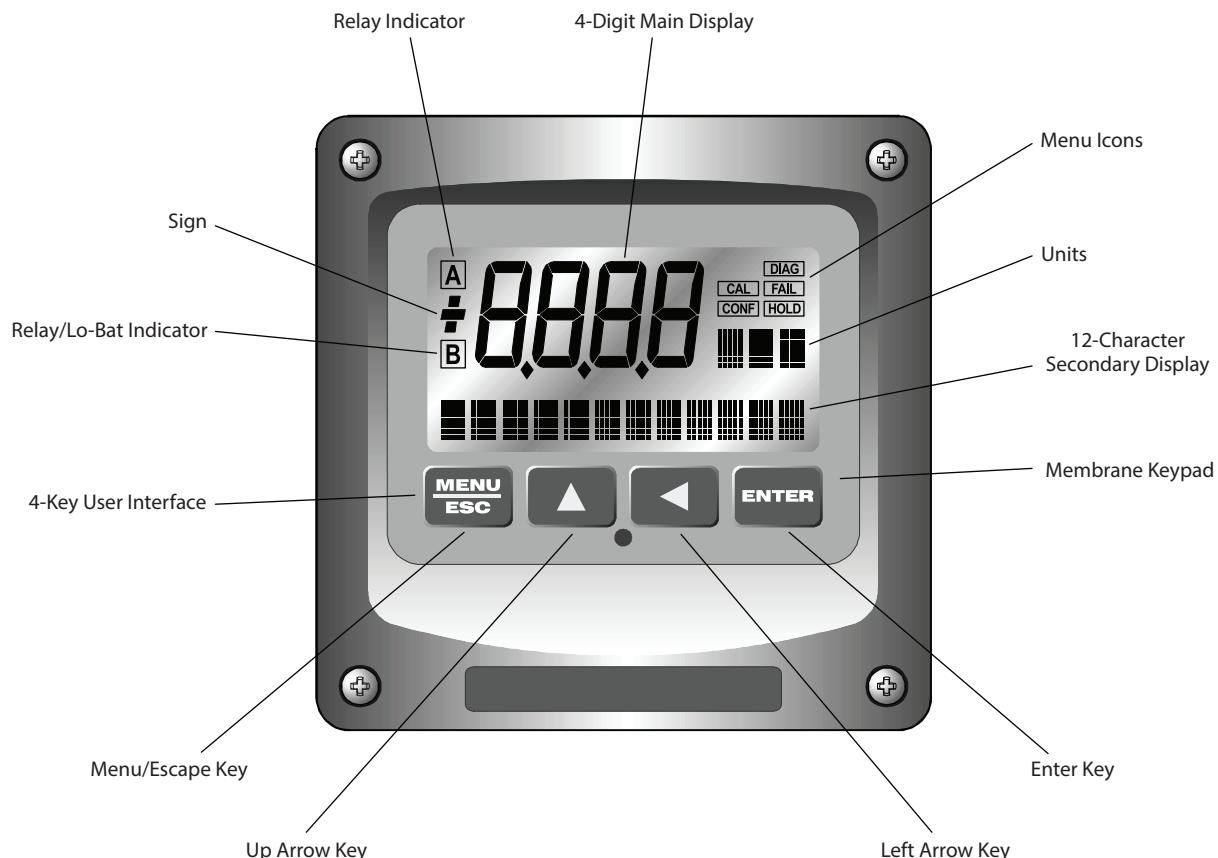


Figure 21: User interface

Keys

All user configurations occur through the use of four membrane keys. These keys are used as follows:

MENU/ESC	To scroll through the menu section headers or to escape from anywhere in software. The escape sequence allows the user to back out of any changes in a logical manner. Using the escape key aborts all changes to the current screen and backs the user out one level in the software tree. The manual refers to this key as either MENU or ESC, depending upon its particular function. In the battery-powered version of the Q46, this is also the ON button.
UP (arrow)	To scroll through individual list or display items and to change number values.
LEFT (arrow)	To move the cursor from right to left during changes to a number value.
ENTER	To select a menu section or list item for change and to store any change.

Display


The large custom display provides clear information for general measurement use and user configuration. There are three main areas of the display: the main parameter display, the secondary message line and the icon area.

Main Parameter During normal operation, the main parameter display indicates the present process input with sign and units. This main display may be configured to display any of the main measurements that the system provides. During configuration, this area displays other useful set-up information to the user.



Lower Line

During normal operation, the lower line of the display indicates user-selected secondary measurements that the system is making. This also includes calibration data from the last calibration sequence and the analyzer model number and software version. During configuration, the lower line displays menu items and set-up prompts to the user. Finally, the lower line displays error messages when necessary. For a description of all display messages, see ["Display Messages" on page 59](#).

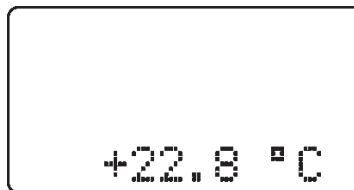

Icon Area

The icon area contains display icons that assist the user in set-up and indicate important states of system functions. The *CAL*, *CONFIG* and *DIAG* icons are used to tell the user what branch of the software tree the user is in while scrolling through the menu items. This improves software map navigation dramatically. Upon entry into a menu, the title is displayed (such as *CAL*) and then the title disappears to make way for the actual menu item. However, the icon stays on.



HOLD

The *HOLD* icon indicates that the current output of the analyzer has been put into output hold. In this case, the output is locked to the last input value measured when the *HOLD* function was entered. *HOLD* values are retained even if the unit power is cycled.

FAIL

The *FAIL* icon indicates that the system diagnostic function has detected a problem that requires immediate attention. This icon is automatically cleared once the problem has been resolved.

Relay Area A/B

The relay area contains two icons that indicate the state of the system relays (if the relay card is installed). Relay C is normally configured for *FAIL* indication, so it is only displayed on the lower *MEASURE* display line.



Software

The software of the Q46H is organized in an easy to follow menu-based system. All user settings are organized under five menu sections: *Measure*, *Calibration [CAL]*, *Configuration [CONFIG]*, *Control [CONTROL]* and *Diagnostics [DIAG]*.

NOTE: The default *Measure* menu is display-only and has no menu icon.

Software Navigation

Within the *CAL*, *CONFIG*, *CONTROL* and *DIAG* menu sections is a list of selectable items. Once a menu section (such as *CONFIG*) has been selected with the **MENU** key, the user can access the item list in this section by pressing either the **ENTER** key or the **UP** arrow key. The list items can then be scrolled through using the **UP** arrow key. Once the last item is reached, the list wraps around and the first list item is shown again. The items in the menu sections are organized such that more frequently used functions are first, while more permanent function settings are later in the list. See [Figure 22 on page 32](#) for a visual description of the software.

Each list item allows a change to a stored system variable. List items are designed in one of two forms: simple single variable, or multiple variable sequence. In the single variable format, the user can quickly modify one parameter. For example, changing temperature display units from °F to °C. In the multiple variable sequence, variables are changed as the result of some process. For example, the calibration of chlorine generally requires more than one piece of information to be entered. The majority of the menu items in the software consist of the single variable format type.

Any data that may be changed flashes. This flashing indicates *User Entry* mode and is initiated by pressing the **ENTER** key. The **UP** arrow key increases a flashing digit from 0...9. The **LEFT** arrow key moves the flashing digit from right to left. Once the change has been completed, pressing **ENTER** again stores the variable and stops the flashing. Pressing **ESC** aborts the change and also exits *User Entry* mode.

The starting (default) screen is always the *Measure* menu. The **UP** arrow key is used to select the desired display. From anywhere in this section the user can press the **MENU** key to select one of the four menu sections.

The **UP** arrow icon next to all list items on the display is a reminder to scroll through the list using the **UP** arrow key.

To select a list item for modification, first select the proper menu with the **MENU** key. Scroll to the list item with the **UP** arrow key and then press the **ENTER** key. This tells the system that the user wishes to perform a change on that item. For single item type screens, once the user presses the **ENTER** key, part or all of the variable begins to flash, indicating that the user may modify that variable using the arrow keys. However, if the instrument is locked, the analyzer displays the message "Locked!" and does not enter *User Entry* mode. The instrument must be unlocked by entering the proper code value to allow authorized changes to user entered values. Once the variable has been reset, pressing the **ENTER** key again causes the change to be stored and the flashing to stop. The message "Accepted!" displays if the change is within pre-defined variable limits. If the user decides not to modify the value after it has already been partially changed, pressing the **ESC** key aborts the modification and returns the entry to its original stored value.

In a menu item which is a multiple variable sequence type, once the **ENTER** key is pressed there may be several prompts and sequences that are run to complete the modification. The **ESC** key can always be used to abort the sequence without changing any stored variables.

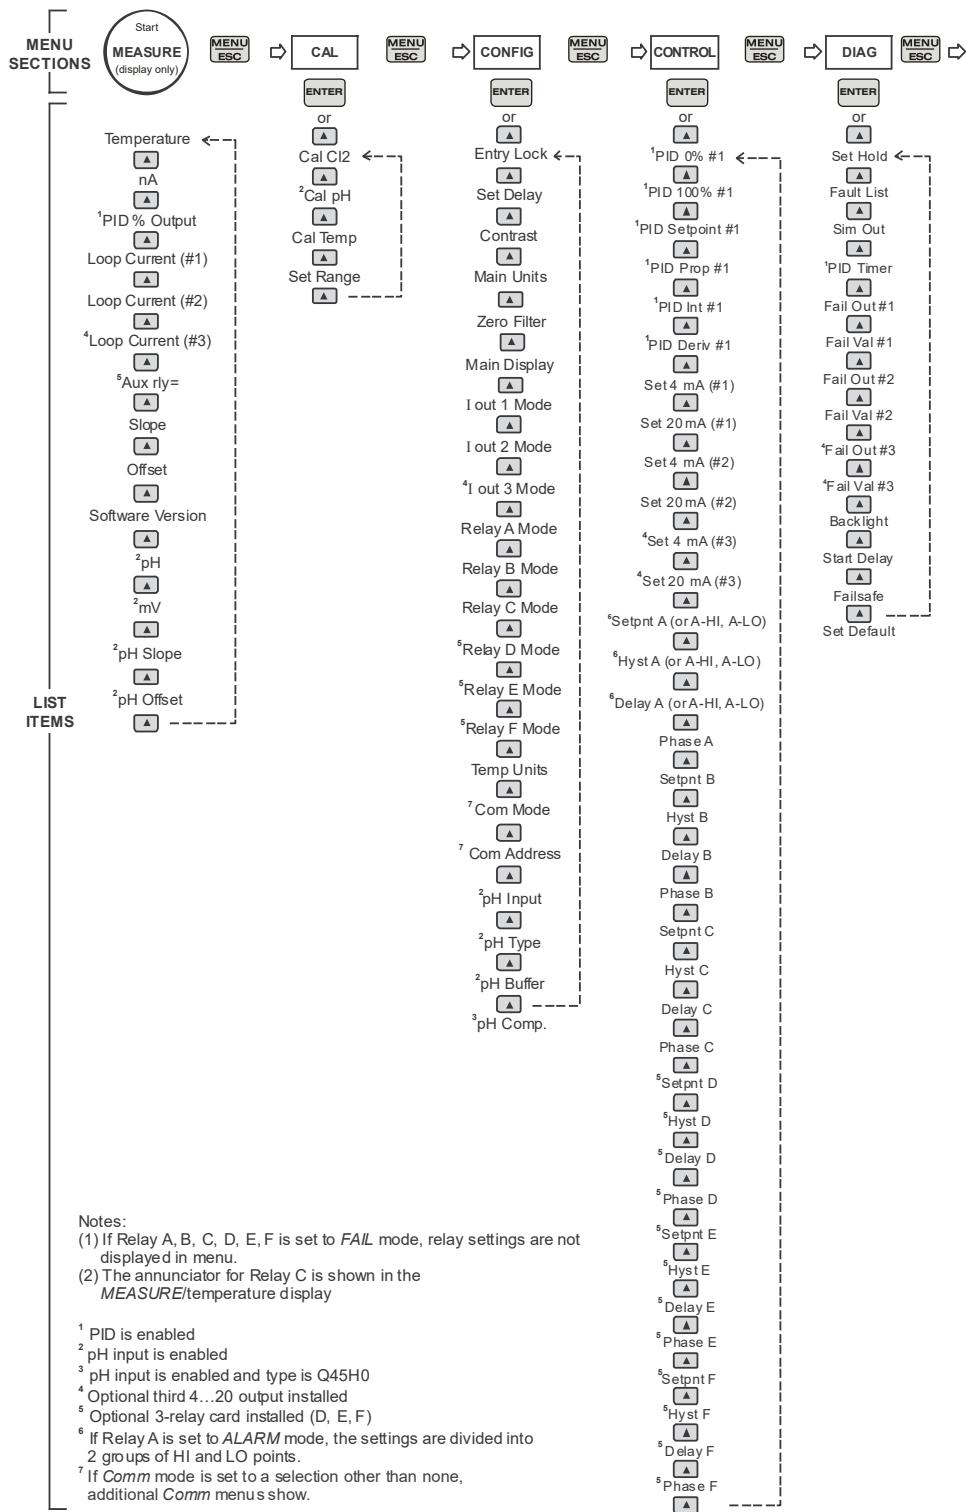


Figure 22: Software map

Measure Menu [MEASURE]

The default menu for the system is the display-only menu *MEASURE*. This menu is a display-only measurement menu and has no changeable list items. When left alone, the instrument automatically returns to this menu after approximately 30 minutes. While in the default menu, the UP arrow allows the user to scroll through the secondary variables on the lower line of the display. A brief description of the fields in the basic analyzer version is as follows:

Analyzer Measure Screens

25.7° C	Temperature display can be displayed in °C or °F, depending on user selection. A small "m" on the left side of the screen indicates the analyzer has automatically jumped to a manual 25° C setting due to a failure with the temperature signal input. Relay C indicator is also displayed here (normally configured as <i>FAIL</i> system relay).
32.0 nA	Raw sensor current. Useful for diagnosing problems.
100% 20.00 mA	<i>PID Status</i> screen (if enabled) shows the present controller output level on the left, and actual analyzer current on the right. The controller can be placed in manual while viewing this screen by pressing and holding the ENTER key for 5 seconds until a small flashing "m" appears on the screen. At that point the controller output can be adjusted up or down using the UP and LEFT arrow keys. To return to automatic operation, press and hold the ENTER key for 5 seconds and the "M" disappears.
#1 4.00 mA	Analyzer output current # 1.
#2 12.00 mA	Analyzer output current # 2.
#3 20.00 mA	Analyzer output current # 3 (if option included)
Aux relay = D, E, F	Auxiliary relay annunciators (if option included).
Slope = 100%	Sensor output response vs. ideal calibration. This value updates after each calibration. As the sensor ages, the slope reading decays indicating sensor aging. Useful for resolving sensor problems.
Offset = 0.0 nA	Sensor output current at a zero ppm input. This value updates after a zero-calibration has been performed. This is useful for resolving sensor problems.
Q60H0 v 4.02	Analyzer software version number.
7.56 pH	Measured pH value on AUX input (if enabled).
814 mV	pH sensor mV output (if enabled).
Slope = 100%	pH sensor slope response vs. ideal calibration. This value updates after each calibration. As the pH sensor ages, the slope reading decays. This is useful for solving sensor problems (if enabled).
Offset = X.X mV	pH sensor current output at 7 pH input. This value updates after calibration is performed and is useful for resolving sensor problems.

NOTE: A display test (all segments ON) can be actuated by pressing and holding the **ENTER** key while viewing the model/version number on the lower line of the display.

The *MEASURE* screens are intended to be used as a very quick means of looking up critical values during operation or troubleshooting.

Calibration Menu [CAL]

The *Calibration* menu contains items for frequent calibration of user parameters. There are four items in this list: *Cal Cl₂*, *Cal pH* (if enabled), *Cal Temp* and *Set Range*.

Cal Cl₂	The chlorine calibration function allows the user to adjust the analyzer span reading to match a reference solution, or to set the sensor zero point. See " "Calibration" on page 44 for more details.
Cal pH (if enabled)	The pH calibration function allows the user to (if enabled) adjust the analyzer offset and span to match the sample or reference buffers. See " "Calibration" on page 44 for more details.
Cal Temp	The temperature calibration function allows the user to adjust the offset of the temperature response by a small factor of $\pm 5^{\circ}\text{C}$. The temperature input is factory calibrated to very high accuracy. However, long cable lengths and junction boxes may degrade the accuracy of the temperature measurement in some extreme situations. Therefore, this feature is provided as an adjustment. See " "Calibration" on page 44 for more details.
Set Range	This function allows the user to set the display range of the analyzer to a specific application. Once set, all output functions use this display range to establish configuration settings. Press ENTER to initiate <i>User Entry</i> mode, and the value flashes. Use the arrow keys to modify value; available ranges include 200.0 ppb, 2.000 ppm, 20.00 ppm and 200.0 ppm. Press ENTER to store the new value. The display range does not affect the internal auto ranging scaler that, therefore, sensitivity is to specification in any user selected range.

Configuration Menu [CONFIG]

The Configuration menu contains all of the general user settings:

Entry Lock	This function allows the user to lock out unauthorized tampering with instrument settings. All settings may be viewed while the instrument is locked, but they cannot be modified. The <i>Entry Lock</i> feature is a toggle-type setting; that is, entering the correct code locks the analyzer and entering the correct code again unlocks it. The code is preset at a fixed value. Press ENTER to initiate <i>User Entry</i> mode and the first digit flashes. Use the arrow keys to modify value. See page 63 for the Q46H lock/unlock code. Press ENTER to toggle lock setting once code is correct. Incorrect codes do not change state of lock condition.
Set Delay	The delay function sets the amount of damping on the instrument. This function allows the user to apply a first order time delay function to the chlorine measurements being made. Both the display and the output value are affected by the degree of damping. Functions such as calibration are not affected by this parameter. The calibration routines contain their own filtering and stability monitoring functions to minimize the calibration timing. Press ENTER to initiate <i>User Entry</i> mode, and the value flashes. Use the arrow keys to modify value; range is 0.1...9.9 minutes. Press ENTER to store the new value.
Contrast	This function sets the contrast level for the display. The custom display is designed with a wide temperature range, Super-Twist Nematic (STN) fluid. The STN display provides the highest possible contrast and widest viewing angle under all conditions. Contrast control of this type of display is generally not necessary, so contrast control is provided as a means for possible adjustment due to aging at extreme ranges. In addition, the display has an automatic temperature compensation network. Press ENTER to initiate <i>User Entry</i> mode, and the value flashes. Use the arrow keys to modify the value; range is 0...8 (0 being lightest). Press ENTER to update and store the new value.
Main Units	This function allows the user to select either ppm or mg/L for the chlorine measurement.
Zero Filter	This function forces the reading to zero when reading is below the entered value. For example, if the entered value were 0.0020 the display at 0.0019 would then indicate 0.0000. This feature is useful in blanking zero noise.
Main Display	This function allows the user to change the measurement in the primary display area. The user may select between chlorine, sensor temperature or output current. Using this function, the user may choose to put temperature in the main display area and chlorine on the secondary, lower line of the display. Press ENTER to initiate <i>User Entry</i> mode, and the entire value flashes. Use the UP arrow key to modify the desired display value. Press ENTER to store the new value.
Com Mode	Sets digital communication mode of analyzer. Optional digital communication card must be plugged into the power supply slot for this function to work. Press ENTER to initiate <i>User Entry</i> mode, and the entire value flashes. Use the UP arrow key to modify the desired value; selections include 1 - None, 2 - P-DP for Profibus DP, 3 - Modbus, 4 - Ethernet IP. Press ENTER to store the new value.
Com Address	Sets bus address for digital communication mode of analyzer. Optional digital communication card must be plugged into the power supply slot for this function to work. Press ENTER to initiate <i>User Entry</i> mode, and the entire value flashes. Use the UP arrow key to modify the desired value. Range is 1...125. Press ENTER to store the new value.
Iout#1 Mode	This function sets analog Output #1 to either track chlorine (default) or enables the PID controller to operate on the chlorine input. Press ENTER to initiate <i>User Entry</i> mode, and the entire value flashes. Use the UP arrow key to modify the desired value; selections include 1 - ppm for chlorine, 2 - PID for PID output. Press ENTER to store the new value.
Iout#2 Mode	This function sets analog Output #2 for temperature (default), chlorine or pH. Press ENTER to initiate <i>User Entry</i> mode, and the entire value flashes. Use the UP arrow key to modify the desired value; selections include 1-°C/°F for temperature, 2-ppm for chlorine or 3-pH for pH. Press ENTER to store the new value.
*Iout#3 Mode	OPTIONAL. This function sets analog Output #3 for temperature (default), chlorine or pH. Press ENTER to initiate <i>User Entry</i> mode, and the entire value flashes. Use the UP arrow key to modify the desired value; selections include 1-°C/°F for temperature, 2-ppm for chlorine or 3-pH for pH. Press ENTER to store the new value.

Relay A Mode	Relay A can be used in three different ways: as a setpoint control, as a fail alarm or as a HI-LO alarm band. The three settings for Relay A mode are <i>CON</i> , <i>FAIL</i> and <i>AL</i> . The <i>CON</i> setting enables normal control operation for Relay A, with settings for setpoint, hysteresis, delay and phasing appearing in the <i>CONFIG</i> menu automatically. See Figure 23 on page 40 for further details. The <i>FAIL</i> setting enables the fail alarm mode for Relay A. Relay A then trips on any condition that causes the <i>FAIL</i> icon to be displayed on the LCD. Using this mode allows the user to send alarm indications to other remote devices. The <i>AL</i> setting allows two setpoints to be selected for the same relay, producing a HI-LO alarm band. In this mode, Relay A trips inside or outside of the band, depending upon the phase selected. See Figure 24 on page 41 for further details.
Relay B Mode	Relay B and C can be used in two ways: as a setpoint control, or as an alarm. The two settings for Relay B mode are <i>CON</i> and <i>FAIL</i> .
Relay C Mode	The <i>CON</i> setting enables normal setpoint operation for Relay B/C. Relay B/C then operates identically to Relay A, with settings for setpoint, hysteresis, delay and phasing appearing in the <i>CONFIG</i> menu automatically. See Figure 23 on page 40 for details. The <i>FAIL</i> setting enables the fail alarm mode for Relay B/C. Relay B/C then trips on any condition that causes the <i>FAIL</i> icon to be displayed on the LCD. NOTE: The Relay C indicator shows up only on the lower screen of the display next to the temperature reading. This is because the default setting for Relay C is the <i>FAIL</i> setting. Using this mode allows the user to send alarm indications to other remote devices. See Figure 24 on page 41 for details.
*Relay D Mode	OPTIONAL. Relays D, E and F can be used in two ways: as a setpoint control, or as an alarm. The two settings for Relay B mode are <i>CON</i> and <i>FAIL</i> .
*Relay E Mode	
*Relay F Mode	The <i>CON</i> setting enables normal setpoint operation for Relays D, E and F. Relays D, E and F then operate identically to Relay A, with settings for setpoint, hysteresis, delay and phasing appearing in the <i>CONFIG</i> menu automatically. See Figure 24 on page 41 for details.
Temp Units	This function sets the display units for temperature measurement. Press ENTER to initiate <i>User Entry</i> mode, and the entire value flashes. Use the UP arrow key to modify the desired display value. The choices are <i>°F</i> and <i>°C</i> . Press ENTER to store the new value.
pH Input	Enables the auxiliary pH input on the instrument. Once enabled, an optional pH sensor can be added to the instrument to provide for additional monitoring of pH (dual instrument, chlorine + pH output). The pH signal can also be sent to one of the analog outputs for monitoring of pH. Once enabled, the pH input value is displayed on the lower line of the <i>MEASURE</i> screens. Press ENTER to initiate <i>User Entry</i> mode, and the entire value flashes. Use the UP arrow key to modify the desired display value. The choices are <i>OFF</i> and <i>ON</i> . Press ENTER to store the new value.
pH Type	Allows the user to select either 1-Comb or 2-Q22P. The 1-Comb selection configures the monitor for a standard pH electrode without using its temperature compensation but in turn, uses the temperature compensator from the chlorine sensor. The 2-Q22P selection configures the monitor for use with the Q22P sensor or for the 4...20 mA input from any other pH monitor.
pH Buffer	This is a multiple variable function that allows the user to choose which pH buffer sets that is used in the 2-point calibration mode. The Q46H contains 3 sets of buffer tables with compensation values ranging from 0...95 °C. During 2-point calibration, the instrument automatically identifies which buffer is being used and compensates for the value based on the built-in tables. The order in which the buffers are used during calibration is unimportant, since the system automatically chooses the correct buffer. The default setting for this feature is OFF, which disables the auto-recognition function. Press ENTER to change this setting. The buffer table set options are: 1: [4/7/10], 2: [4/7/9.18] and 3: [4.65/6.79/9.23]. See "Automatic pH Buffer Tables" on page 38 for buffer tables. Once the buffer set is selected, press ENTER and the message "Accepted!" displays on the lower line.

pH Comp Enables pH compensation of free chlorine measurements using a built in comp table. An optional pH sensor is required for this compensation method, and “pH Input” menu item above must be selected to be ON. pH type must also be selected. Once enabled, this feature compensates for reduced chlorine readings that would normally result at elevated pH readings. A built-in table increases the chlorine reading gradually as pH increases, in an effort to maintain a constant chlorine measurement. Press **ENTER** to initiate *User Entry* mode, and the entire value flashes. Use the **UP** arrow key to modify the desired display value. The choices are “OFF” and “ON.” Press **ENTER** to store the new value. See “[Calibration](#)” on page 44 for details.

Automatic pH Buffer Tables

Table 1

4.00 pH		7.00 pH		10.00 pH	
°C	pH	°C	pH	°C	pH
0	4.00	0	7.10	0	10.27
10	3.99	10	7.06	10	10.15
20	4.00	20	7.02	20	10.05
30	4.01	30	6.99	30	9.95
40	4.03	40	6.97	40	9.87
50	4.05	50	6.98	50	9.80
60	4.08	60	6.98	60	9.75
70	4.12	70	6.97	70	9.73
80	4.16	80	6.99	80	9.73
90	4.21	90	7.01	90	9.75
95	4.24	95	7.01	95	9.77

Table 2

4.00 pH		7.00 pH		9.18 pH	
°C	pH	°C	pH	°C	pH
0	4.00	0	7.10	0	9.46
10	3.99	10	7.06	10	9.33
20	4.00	20	7.02	20	9.23
30	4.01	30	6.99	30	9.14
40	4.03	40	6.97	40	9.07
50	4.05	50	6.98	50	9.01
60	4.08	60	6.98	60	8.96
70	4.12	70	6.97	70	8.92
80	4.16	80	6.99	80	8.89
90	4.21	90	7.01	90	8.85
95	4.24	95	7.01	95	8.83

Table 3

4.65 pH		6.79 pH		9.23 pH	
°C	pH	°C	pH	°C	pH
0	4.67	0	6.89	0	9.48
10	4.66	10	6.84	10	9.37
20	4.65	20	6.80	20	9.27
30	4.65	30	6.78	30	9.18
40	4.66	40	6.76	40	9.09
50	4.68	50	6.76	50	9.00
60	4.70	60	6.76	60	8.92
70	4.72	70	6.76	70	8.88
80	4.75	80	6.78	80	8.85
90	4.79	90	6.80	90	8.82
95	4.79	95	6.80	95	8.82

Control Menu [CONTROL]

The *Control* menu contains all of the output control user settings:

Set PID 0% [lout1=PID]	If the PID is enabled, this function sets the minimum and maximum controller end points. Unlike the standard 4...20 mA output, the controller does not "scale" output values across the endpoints. Rather, the endpoints determine where the controller would normally force minimum or maximum output in an attempt to recover the setpoint (even though the controller can achieve 0% or 100% anywhere within the range). If the 0% point is lower than the 100% point, then the controller action "reverse" acts. That is, the output of the controller increases if the measured value is less than the setpoint, and the output decreases if the measured value is larger than the setpoint. Flipping the stored values in these points reverses the action of the controller to "direct" mode. The entry value is limited to a value within the range specified in "Set Range", and the 0% and the 100% point must be separated by at least 1% of this range. Use the LEFT arrow key to select the first digit to be modified. Then use the UP and LEFT arrow keys to select the desired numerical value. Press ENTER to store the new value.
PID Setpt [lout1=PID]	The measured value which the controller is attempting to maintain by adjusting output value. It is the nature of the PID controller that it never actually gets to the exact value and stops. The controller is continually making smaller and smaller adjustments as the measured value gets near the setpoint.
PID Prop [lout1=PID]	Proportional gain factor. The proportional gain value is a multiplier on the controller error (difference between measured value and setpoint value). Increasing this value makes the controller more responsive.
PID Int [lout1=PID]	Integral is the number of "repeats-per-minute" of the action of the controller. It is the number of times per minute that the controller acts on the input error. At a setting of 2.0 rpm, there are two repeats every minute. If the integral is set to zero, a fixed offset value is added to the controller (manual reset). Increasing this value makes the controller more responsive.
PID Deriv [lout1=PID]	Derivative is a second order implementation of Integral, used to suppress "second-order" effects from process variables. These variables may include items like pumps or mixers that may have minor impacts on the measured value. The derivative factor is rarely used in water treatment process, and therefore, it is best in most cases to leave it at the default value. Increasing this value makes the controller more responsive.
Set 4 mA #1 Set 20 mA #1 [lout1=chlorine]	These functions set the main 4 and 20 mA current loop #1 output points for the analyzer when output 1 is in normal, non-PID, mode of operation. The value stored for the 4 mA point may be higher or lower than the value stored for the 20 mA point. The entry values are limited to values within the range specified in "Set Range," and the 4 mA and the 20 mA point must be separated by at least 1% of this range. Use the LEFT arrow key to select the first digit to be modified. Then use the UP and LEFT arrow keys to select the desired numerical value. Press ENTER to store the new value.
Set 4 mA #2 Set 20 mA #2 [temp/chlor/pH]	These functions set the second 4 mA and 20 mA current loop #2 output points for the analyzer. The output may be set to track temperature (default), pH or chlorine. The values stored for the 4 mA point may be higher or lower than the value stored for the 20 mA point. The entry value is limited to a value between 0...55° C if it is set for temperature, within the range specified in "Set Range" if the output is set to track chlorine, and must be within 0...14 pH if set to track pH. The 4 mA and the 20 mA point must be at least 20 units away from each other. Press ENTER to initiate <i>User Entry</i> mode, and the value flashes. Use the arrow keys to modify value. Press ENTER to store the new value.
NOTE: If the temperature units are changed between °C and °F (see " Temp Units " on page 36), the default settings for this output is stored (present data is not converted).	

Set 4 mA #3**Set 20 mA #3**

[temp/chlor/pH]

OPTIONAL. These functions set the optional third 4 mA and 20 mA current loop output points for the analyzer. The output may be set to track temperature (default), pH or chlorine. The values stored for the 4 mA point may be higher or lower than the value stored for the 20 mA point.

The entry value is limited to a value between 0...55° C if it is set for temperature, within the range specified in "Set Range" if the output is set to track chlorine, and must be within 0...14 pH if set to track pH. The 4 mA and the 20 mA point must be at least 20 units away from each other. Press **ENTER** to initiate *User Entry* mode, and the value flashes. Use the arrow keys to modify value. Press **ENTER** to store the new value.

A Setpoint

This function establishes the chlorine trip point for Relay A. The entry value is limited to a value within the range specified. Use the **LEFT** arrow key to select the first digit to be modified. Then use the **UP** and **LEFT** arrow keys to select the desired numerical value. Press **ENTER** to store the new value.

A Hysteresis

This function establishes the hysteresis, or "deadband", for Relay A. Hysteresis is most often used to control relay chattering; however, it may also be used in control schemes to separate the ON/OFF trip points of the relay. Press **ENTER** to initiate *User Entry* mode, and the value flashes. Use the arrow keys to modify value. Press **ENTER** to store the new value.

A Delay


This function places an additional amount of time delay on the trip point for Relay A. This delay is in addition to the main delay setting for the controller. The entry value is limited to a value between 0...999 seconds. Press **ENTER** to initiate *User Entry* mode, and the value flashes. Use the arrow keys to modify value; range is 0...999 seconds. Press **ENTER** to store the new value.

A Phasing


This function establishes the direction of the relay trip. When phase is HI, the relay operates in a direct mode. Therefore, the relay energizes and the LCD indicator illuminates when the chlorine value **exceeds** the setpoint. When the phase is LO, the relay energizes and the LCD indicator illuminates when the chlorine level drops **below** the setpoint. The failsafe setting does have an impact on this logic. The description here assumes the failsafe setting is OFF. Press **ENTER** to initiate *User Entry* mode, and the entire value flashes. Use the **UP** arrow key to modify the desired value; selections include **HI** for direct operation or **LO** for reverse operation. Press **ENTER** to store the new value.

See [Figure 23](#) for a visual description of a typical control relay application.

When value rises to ≥ 1.000 ppm, relay closes.

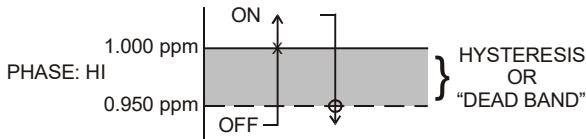

When value rises to ≥ 1.050 ppm, relay opens.

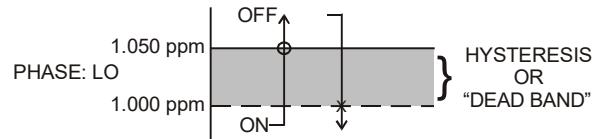

When value falls to ≤ 0.950 ppm, relay opens.

When value falls to ≤ 1.000 ppm, relay closes.

Settings: Setpoint: 1.000 ppm
Hyst: 0.050
Delay: 000
Failsafe: OFF


Figure 23: Control relay example

Setptn A-HI
Hyst A-HI
Delay A-HI
Setptn A-LO
Hyst A-LO
Delay A-LO

If Relay A mode is set to *Alarm* mode, **AL**, then the following settings appear in the *CONFIG* menu list automatically. In this mode, two setpoints can be selected on the same relay, to create an alarm band. *Phase HI* selection causes the relay to energize outside of the band, and *Phase LO* causes the relay to energize inside of the band. This feature enables one relay to be used as a control relay while the other is used as a *HI-LO Alarm* relay at the same time. *Setpoint A-LO* must be set lower than *Setpoint A-HI*. When *AL* mode is first selected, *Setpoint A-LO* is defaulted to 0.


[Figure 24](#) is a visual description of a typical alarm relay application.

When value rises to ≥ 1.000 ppm, relay closes, until value falls back to ≤ 0.950 ppm.

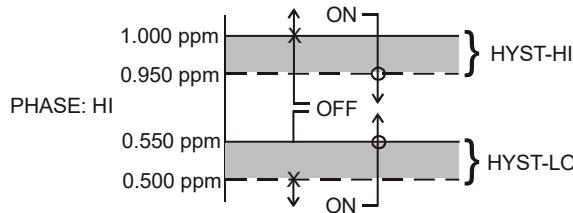

When value falls to ≤ 0.500 ppm, relay closes, until value rises back to ≥ 0.550 ppm.

When value falls to ≤ 1.000 ppm, relay closes, until value rises back to ≥ 1.050 ppm.

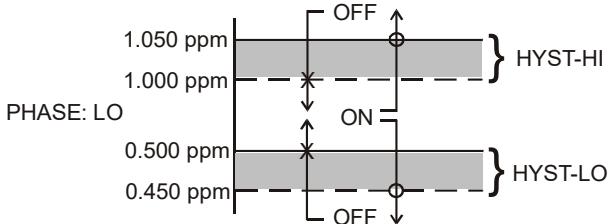

When value rises to ≥ 0.500 ppm, relay closes, until value falls back to ≤ 0.450 ppm.

Settings:	Setpoint Hyst Delay	A-HI: 1.000 ppm	Setpoint Hyst Delay	A-LO: 0.500 ppm
		A-HI: 1.050		A-LO: 0.050
		A-HI: 000		A-LO: 000

[Figure 24: Alarm relay example](#)

B Setpoint
B Hysteresis
B Delay
B Phasing

If Relay B mode is set to **CON** (see **Relay B Mode**), then Relay B functions identically to Relay A. Relay B settings appear in the *CONFIG* menu list automatically.

C Setpoint
C Hysteresis
C Delay
C Phasing

If Relay C mode is set to **CON** (see **Relay C Mode**), then Relay C functions identically to Relay A. Relay C settings appear in the *CONFIG* menu list automatically.

D, E, F Setpoint
D, E, F Hyster
D, E, F Delay
D, E, F Phasing

If Relay D, E or F mode is set to **CON** (see **Relay D, E, F Modes**), then Relay functions identically to Relay A. Relay settings appear in the *CONFIG* menu list automatically.

Diagnostics Menu [DIAG]

The *Diagnostics* menu contains all of the user settings that are specific to the system diagnostic functions, as well as functions that aid in troubleshooting application problems.

Fault List

The *Set Hold* function locks the current loop output values on the present process value and halts operation of the PID controller. This function can be used prior to calibration, or when removing the sensor from the process, to hold the output in a known state. Once *HOLD* is released, the outputs return to their normal state of following the process input. The transfer out of *HOLD* is bumpless on both analog outputs - that is, the transfer occurs in a smooth manner rather than as an abrupt change. An icon on the display indicates the *HOLD* state, and the *HOLD* state is retained even if power is cycled. Press **ENTER** to initiate *User Entry* mode, and the entire value flashes. Use the **UP** arrow key to modify the desired value, selections are **ON** for engaging the *HOLD* function and **OFF** to disengage the function. Press **ENTER** to store the new value.

NOTE: *Set Hold* function holds BOTH current levels, as well as ALL relay settings.

The *Set Hold* function can also hold at an output value specified by the user. To customize the hold value, first turn the *HOLD* function on. Press the **ESC** key to go to the *DIAG* menu and scroll to *Sim Output* using the **UP** arrow key. Press **ENTER**. Follow the instructions under "["Sim Out"](#)".

CAUTION:

THERE IS NO TIME-OUT ON THE HOLD FEATURE. ONCE PLACED INTO HOLD MODE, RETURN TO NORMAL OPERATION MUST BE DONE MANUALLY.

Fault List

The *Fault List* screen is a read-only screen that allows the user to display the cause of the highest priority failure. The screen indicates the number of faults present in the system and a message detailing the highest priority fault present.

NOTE: Some faults can result in multiple displayed failures due to the high number of internal tests occurring. As faults are corrected, they are immediately cleared.

Faults are not stored; therefore, they are immediately removed if power is cycled. If the problem causing the faults still exists, however, faults display again after power is re-applied and a period of time elapses during which the diagnostic system re-detects them. The exception to this rule is the calibration failure. When a calibration fails, no corrupt data is stored. Therefore, the system continues to function normally on the data that was present before the calibration was attempted.

After 30 minutes or if power to the analyzer is cycled, the failure for calibration clears until calibration is attempted again. If the problem still exists, the calibration failure reoccurs. Press **ENTER** to initiate view of the highest priority failure. The display automatically returns to normal after a few seconds.

PID Timer

This function sets a timer to monitor the amount of time the PID controller remains at 0% or 100%. This function only appears if the PID controller is enabled. If the timer is set to 0000, the feature is effectively disabled. If the timer value is set to any number other zero, a *FAIL* condition occurs if the PID controller remains at 0% or 100% for the timer value. If one of the relays is set to *FAIL* mode, this failure condition can be signaled by a changing relay contact.

Press **ENTER** to initiate *User Entry* mode, and the entire value flashes. Use the **UP** arrow key to modify desired value; range of value is 0...9999 seconds. Press **ENTER** to store the new value.

Sim Out

The *Sim Out* function allows the user to simulate the chlorine level of the instrument in the user selected display range. The user enters a ppm value directly onto the screen, and the output responds as if it were actually receiving the signal from the sensor. This allows the user to check the function of attached monitoring equipment during set-up or troubleshooting. Escaping this screen returns the unit to normal operation. Press **ENTER** to initiate the *User Entry* mode, and the rightmost digit of the value flashes. Use the arrow keys to modify desired value.

The starting display value in *SIM* mode is the last read value of the input. The output is under control of the *SIM* screen until the **ESC** key is pressed. The instrument automatically terminates the simulated output after 30 minutes and returns to normal operation unless the *HOLD* function is engaged.

NOTE: If the *HOLD* function is engaged before the *Sim Output* function is engaged, the simulated output remains the same even when the **ESC** key is pressed. Disengage the *HOLD* function to return to normal output.

Fail Out #1	This function enables the user to define a specified value that the main current output goes to under fault conditions. When enabled to ON , the output may be forced to the current value set in <i>Fail Val</i> (next item). With the <i>Fail Out</i> setting of ON, and a <i>Fail Val</i> setting of 6.5 mA, any alarm condition causes the current loop output to drop outside the normal operating range to exactly 6.5 mA, indicating a system failure that requires attention. Press ENTER to initiate <i>User Entry</i> mode, and the entire value flashes. Use the UP arrow key to modify desired value; selections are ON, OFF . Press ENTER to store the new value.
Fail Val #1	Sets the output failure value for lout#1. When <i>Fail Out</i> above is set to ON , this function sets value of the current loop under a <i>FAIL</i> condition. The output may be forced to any current value between 4...20 mA. Press ENTER to initiate <i>User Entry</i> mode, and the entire value flashes. Use the UP arrow key to modify desired value; selections are between 4 mA...20 mA. Press ENTER to store the new value.
Fail Val #2	This function sets the value of current loop Output #2 under a <i>FAIL</i> condition. The settings and operation are identical to <i>Fail Out</i> for Output #1.
*Fail Out #3	OPTIONAL. This function sets the fail-mode of current loop Output #3 under a <i>FAIL</i> condition. The settings and operation are identical to <i>Fail Out</i> for Output #1.
*Fail Val #3	OPTIONAL. This function sets the value of current loop Output #3 under a <i>FAIL</i> condition. The settings and operation are identical to <i>Fail Out</i> for Output #1.
Backlight	This function has three options. ON – On all the time, OFF – Off all the time, AL – Alarm (Default). This function flashes the backlight on and off whenever the <i>FAIL</i> icon is displayed.
Failsafe	This function allows the user to set the optional system relays to a failsafe condition. In a failsafe condition, the relay logic is reversed so that the relay is electrically energized in a normal operating state. By doing this, the relay does not only change state when, for example, a chlorine limit is exceeded, but also when power is lost to the controller. When failsafe is selected to be ON, the normally-open contacts of the relay close during normal operation. In an attempt to make this configuration less confusing, the LCD icon logic is reversed with this setting, and the icon is OFF under this normal condition. Therefore, when the trip condition occurs, the closed N.O. contacts open (relay de-energized), and the LCD icon illuminates. In addition, a power fail would also cause the same contacts to open.
Start Delay	This function is designed to minimize control or alarm issues arising from temporary power loss. When power goes down, the monitor records the analog output values and the status of relays and PID functions. When power is restored, the analog values and relays are held at the pre-power loss values for a defined period of time. This "start delay" may be programmed for periods from 0...9.9 minutes. This function is set to 0.0 minutes by default and must be activated by the user if desired by setting a positive time value.
Set Default	The <i>Set Default</i> function allows the user to return the instrument back to factory default data for all user settings or for just the calibration default. It is intended to be used as a last resort troubleshooting procedure. All user settings or the calibration settings are returned to the original factory values. Hidden factory calibration data remains unchanged. Press ENTER to initiate <i>User Entry</i> mode and select either ALL or CAL with the UP arrow key.

CALIBRATION

Chlorine Calibration

After power is applied, the sensor must be given time to stabilize. This is best done by following the zeroing procedure below. Establishing a stable zero is critical to the proper operation of the monitor. A complete calibration includes zeroing and spanning the sensor. It is generally unnecessary to set the sensor zero unless the monitor is used primarily for measurements below 0.5 ppm. Typical sensor zero offsets are less than 0.05 ppm and can largely be ignored in many applications.

Chlorine Zero Cal

Chlorine sensors have extremely low offset currents at zero. For this reason, it is normally sufficient to simply leave the zero at the factory default of 0.0 nA. As an alternative, an electronic zero can be set by disconnecting the sensor from the cable and performing steps 3...5 below.

If sensor zeroing is desired, the steps below guide you through the process. This procedure assumes that the sensor has been prepared in accordance with ["Chlorine Sensor Preparation" on page 27](#).

NOTE: The 8 hour waiting time in step 2 below is not required if the monitor has been running for 24 hours prior to zeroing. If the unit has been running with the sensor connected, the sensor normally returns to a stable zero within 15 minutes.

1. Connect the sensor to the electronics by plugging the cable plug into the receptacle on the top of the sensor.
2. Place about an inch of water in a small beaker or other convenient container and immerse the tip of the sensor. The water used need not be distilled, but it must not contain residual chlorine. For submersible sensors, submerge the entire sensor in a bucket of unchlorinated water. Allow the sensor to sit undisturbed for at least 8 hours.
3. Scroll to the CAL menu section using the **MENU** key and press **ENTER** or the **UP** arrow key. "Cal Chlor" is then displayed.
4. Press the **ENTER** key. The screen displays a flashing "1-Ref" for span calibration or a "2-Zer" for zero calibration. Using the **UP** arrow key, set for a 2-Zer zero calibration and press **ENTER**. The system now begins acquiring data for the sensor zero calibration value. As data is gathered, the units for sensor current in nanoamps (nA) and temperature may flash. Flashing units indicate that this parameter is unstable. The calibration data point acquisition stops only when the data remains stable for a pre-determined amount of time. This can be overridden by pressing **ENTER**. If the data remains unstable for 10 minutes, the calibration fails and the message "Cal Unstable" displays.
5. If accepted, the screen displays the message "PASS" with the new sensor zero reading (offset), then it returns to the main measurement display. If the calibration fails, a message indicating the cause of the failure displays and the "FAIL" icon turns on. The range of acceptable value for sensor offset is -25 nA...+25 nA. Should a *FAIL* occur, carefully inspect the sensor for a tear in the membrane. It is probably necessary to rebuild the sensor as described in ["Chlorine Sensor Preparation" on page 27](#). Should the offset value remain high and result in calibration failures, review ["Troubleshooting" on page 57](#) and then contact the service dept. at Badger Meter for further assistance.

The sensor zero offset value in nA from the last zero calibration is displayed on the lower line of the *Default* menus for information purposes.

Chlorine Span Cal

Span calibration of the system must be done against a laboratory measurement on the same sample that the sensor is measuring. A sample should be collected from the inlet line feeding the flow cell and quickly analyzed for free chlorine. When calibrating, it is best to have a reasonably high concentration of free chlorine in the system. The higher the value, the smaller the calibration errors caused by errors in the laboratory analytical procedure. It is generally preferable to calibrate at values above 0.5 ppm to reduce calibration errors. If possible, the amperometric titration procedure for free chlorine should be used as the reference method. The chlorine monitor should be calibrated while operating on a chlorinated sample stream in the flow cell assembly.

Alternately, the DPD colorimetric method may be used provided that the sample contains mainly free chlorine, with no more than a trace of chloramines. The DPD procedure indicates high values for free chlorine if a large amount of monochloramine is present in the sample. Start flow cell and calibrate system as follows:

1. Place the previously zeroed sensor into the sensor chamber of the flow cell assembly. The sensor is inserted into the side of the flow cell and is sealed in place with a double O-ring. The O-rings are lubricated at the factory to allow the sensor to slide smoothly into place. If insertion becomes difficult, use a small amount of silicon grease to lubricate the O-rings. If the low-volume flow cell is used, screw the sensor into the flow cell until the membrane cap bottoms out on the acrylic flow cell. Do not over-tighten.
2. Turn on the inlet water flow to the flow cell and adjust the inlet flow rate so that water is overflowing from the inlet chamber. The best performance is obtained when some water is always overflowing. This maintains constant flow and pressure on the sensor at all times.
3. Allow the system to operate undisturbed for 30...60 minutes. Assuming the water contains chlorine, the display reads positive sensor current values. If the system is stable, the value on the display increases to some ppm value and remains at that level. At that point, calibration can continue.
4. If the sensor is online, the user may want to set the output *HOLD* feature prior to calibration to lock out any output fluctuations.
5. Scroll to the **CAL** menu section using the **MENU** key and press **ENTER** or the **UP** arrow key. "Cal Cl₂" displays.
6. Press the **ENTER** key. The screen displays a flashing "1-Ref" for span calibration or a "2-Zer" for zero calibration. Using the **UP** arrow key, set for a 1-Ref span calibration and press **ENTER**.
7. The system now begins acquiring data for the calibration value. As data is gathered, the units for ppm and temperature may flash. Flashing units indicate that this parameter is unstable. The calibration data point acquisition stops only when the data remains stable for a pre-determined amount of time. This can be overridden by pressing **ENTER**. If the data remains unstable for 10 minutes, the calibration fails and the message "Cal Unstable" displays.
8. The screen displays the last measured ppm value and a message displays prompting the user for the lab value. The user must then modify the screen value with the arrow keys and press **ENTER**. The system then performs the proper checks.

NOTE: The monitor waits for up to 2 hours for the user to enter the measured value for calibration. If no entry is made after 2 hours, the monitor returns to normal operation with the original slope value remaining unchanged.

9. If accepted, the screen displays the message "PASS" with the new sensor slope reading, and then returns to the main measurement display. If the calibration fails, a message indicating the cause of the failure displays and the "FAIL" icon turns on. The range of acceptable values for sensor slope is 20...500%. It may be necessary to rebuild the sensor as described in "[Chlorine Sensor Preparation](#)" on page 27. Should the slope value remain out of range and result in calibration failures, review "[Troubleshooting](#)" on page 57, then contact the service dept. at Badger Meter for further assistance.

The sensor offset value in % from the last span calibration is displayed on the lower line of the *Default* menus for information purposes.

Temperature Calibration

The temperature calibration sequence is essentially a 1-point offset calibration that allows adjustments of approximately $\pm 5^\circ \text{C}$.

The sensor temperature may be calibrated on line, or the sensor can be removed from the process and placed into a known solution temperature reference. In any case, it is critical that the sensor be allowed to reach temperature equilibrium with the solution in order to provide the highest accuracy. When moving the sensor between widely different temperature conditions, it may be necessary to allow the sensor to stabilize as much as one hour before the calibration sequence is initiated. If the sensor is online, the user may want to set the output *HOLD* feature prior to calibration to lock out any output fluctuations.

1. Scroll to the *CAL* menu section using the **MENU** key and press **ENTER** or the **UP** arrow key.
2. Press the **UP** arrow key until "Cal Temp" is displayed.
3. Press the **ENTER** key. The message "Place sensor in solution then press ENTER" displays. Move the sensor into the calibration reference (if it hasn't been moved already) and wait for temperature equilibrium to be achieved. Press **ENTER** to begin the calibration sequence.
4. The calibration data gathering process begins. The message "Wait" flashes as data is accumulated and analyzed. The " $^\circ\text{C}$ " or " $^\circ\text{F}$ " symbol may flash periodically if the reading is too unstable.
5. The message "Adjust value - press ENTER" displays, and the rightmost digit begins to flash, indicating that the value can be modified. Using the **UP** and **LEFT** arrow keys, modify the value to the known ref solution temperature. Adjustments up to $\pm 5^\circ \text{C}$ from the factory calibrated temperature are allowed. Press **ENTER**.

Once completed, the display indicates "PASS" or "FAIL." If the unit fails, the temperature adjustment may be out of range, the sensor may not have achieved complete temperature equilibrium or there may be a problem with the temperature element. In the event of calibration failure, it is recommended to attempt the calibration again immediately.

pH Calibration

The *pH Calibration* menus are not seen unless the optional pH sensor input is turned ON and a pH sensor is connected to the instrument. See "[Calibration Menu \[CAL\]](#)" on page 34 for more details.

The pH calibration functions appear in the *CAL* menu listing when the optional pH input is enabled in the *CONFIG* menu. When enabled, the pH input signal is used to compensate the free chlorine signal. Calibration of pH is performed in one of two methods; one-point or two-point. For new sensors or for calibration in two different pH buffers with the sensor removed from the process, choose a two-point calibration. For online calibrations with the sensor still mounted in the process, choose a one-point calibration. For two-point calibrations, it is highly recommended to use fresh pH buffers of 4 pH and 7 pH, or 7 pH and 9.18 pH.

The conductivity difference between the process water and the sensor reference solution can cause an effect called a "junction potential." The junction material of the pH sensor is porous ceramic, which allows the sensor reference solution to be in electrical continuity with the process solution. One problem is caused by the reference junction and the diffusion rate of the electrolyte through the junction material. The inside surface of the junction material is in contact with the reference cell solution, which has a very high ionic strength. The outside surface of the junction material is in contact with the process water, which can have low ionic strength. This concentration gradient creates what is called a "junction potential" which can vary with the flow rate of the process. The magnitude of this potential can be upwards of 30 mV (half a pH unit). The lower the conductivity of the water the larger the effect.

It is not possible to eliminate this effect; however it usually is constant or very slow changing.

A full calibration of the pH sensor consists of an initial 2-point calibration in buffers. This sets the slope and zero offset of the sensor. The sensor should then be left in the process water for enough time for the system to fully stabilize to process conditions. This may take up to a few hours, depending on process conditions. A 1-point calibration must then be carried out. The ideal way to do this is by calibrating to a laboratory sample. After the 1-point calibration only the zero offset changes.

Routine calibration of the pH sensor is a 1-point calibration.

Two-Point pH Cal

1. Thoroughly clean the pH sensor and place it into the first pH calibration buffer, stirring it several times before letting it rest in the beaker. Allow sensor to sit in solution long enough to achieve temperature equilibrium with the pH buffer (maybe 5 minutes). It is important that both pH buffers be fresh and at room temperature.
2. Scroll to the **CAL** menu section using the **MENU** key and press **ENTER** or the **UP** arrow key.
3. Press the **UP** arrow key until "Cal pH Type" is displayed.
4. Press the **ENTER** key. The display begins to flash. Using the **UP** arrow key, adjust the displayed number to a **2** pt calibration type. This allows the user to offset + slope adjust the sensor input for two separate pH points. Once value has been adjusted, press the **ENTER** key and the message "Accepted!" displays.
5. Scroll to the next menu item by pressing the **UP** arrow key once. The menu item "Cal pH buf1" displays.
6. Press the **ENTER** key. The display begins to flash. Using the **UP** and **LEFT** arrow keys, adjust the displayed number to the known value of the pH buffer. The exact temperature compensated number for pH buffers is typically written on the side of the buffers shipping container. Once value has been adjusted, press the **ENTER** key.
7. The message "Accepted!" displays, or an error describing the cause of the failure. If the cal point was accepted, rinse the sensor in distilled or de-ionized water and move it into the second pH buffer. Stir it slightly several times and let the sensor rest in the beaker.
8. Scroll to the next menu item by pressing the **UP** arrow key once. The menu item "Cal pH buf2" displays.
9. Press the **ENTER** key. The display begins to flash. Using the **UP** and **LEFT** arrow keys, adjust the displayed number to the known value of the second (higher or lower value) pH buffer. Once value has been adjusted, press the **ENTER** key.
10. The message "Accepted!" displays, or an error describing the cause of the failure. The system is now two-point calibrated for pH.

One-Point pH Cal

1. For this calibration method, the sensor may be removed, cleaned and placed into a known pH buffer or it may be calibrated online against a known reference value. If the sensor is removed, thoroughly clean the pH sensor and place it into the pH calibration buffer, stirring it several times before letting it rest in the beaker. Allow sensor to sit in solution long enough to achieve temperature equilibrium with the pH buffer (maybe 5 minutes). It is important that the pH buffer be fresh and at room temperature.
2. Scroll to the **CAL** menu section using the **MENU** key and press the **ENTER** or the **UP** arrow key.
3. Press the **UP** arrow key until "Cal pH Type" is displayed.
4. Press the **ENTER** key. The display begins to flash. Using the **UP** arrow key, adjust the displayed number to a **1** pt calibration type. This allows the user to offset-adjust the sensor input for one pH point. Once value has been adjusted, press the **ENTER** key and the message "Accepted!" displays.
5. Scroll to the next menu item by pressing the **UP** arrow key once. The menu item "Cal pH buf1" displays.
6. Press the **ENTER** key. The display begins to flash. Using the **UP** and **LEFT** arrow keys, adjust the displayed number to the known value of the pH buffer. If the sensor is still mounted in the process, enter the known reference value. The exact temperature compensated number for pH buffers is typically written on the side of the buffers shipping container. Once value has been adjusted, press the **ENTER** key.
7. The message "Accepted!" displays, or an error describing the cause of the failure. The system is now one-point calibrated for pH.

Adjusting pH Compensation Curve

If the pH input is ON and the pH Comp feature is enabled (see section “[Calibration Menu \[CAL\] on page 34](#)”), then the chlorine reading automatically adjusts for changes in the pH measurement. In general, chlorine readings fall as the pH increases from 7...10 pH, and the automatic compensation feature allows a relatively constant reading to be maintained without the use of pumps and reagents. Under most conditions, all that is required to use this feature is to enable it and calibrate all sensors. The change in readings with pH changes are fairly small in the pH 7...8 range, but become more pronounced at high pH values. The default pH correction curve in the monitor is suitable for a high percentage of applications.

Years of experience have shown that the pH compensation curve is not identical in all applications. As mentioned previously, most are close to default values, but some waters exhibit curves that are significantly different. Badger Meter Q46H/62 free chlorine monitors with software revision 4.05 and higher provide a unique method of adjusting the pH compensation curve to fit special situations.

Modifying pH Correction Values

There are actually two standard pH correction curves stored in the monitor as shown in “[Table 4](#)” below. Each curve is based on a table of 8 values. Each table entry is a pH value and an associated multiplier. The *Lo Gain* table is the default correction curve loaded at the factory.

Table 4

pH	Lo Gain	Hi Gain	Modifications
6.55	0.950	0.950	
7.05	1.000	1.000	
7.55	1.110	1.150	
8.05	1.315	1.450	
8.55	1.770	2.100	
9.05	2.540	3.200	
9.55	4.850	6.500	
10.05	7.300	9.999	

Access to the menu that allows editing of correction factors is hidden. Accidental adjustment of these values can cause large measurement errors, and editing of this data should only be done by those who thoroughly understand the impact of the changes they are making. The edit menu does not normally appear when operators are scrolling through standard menu items.

To access the table editing routines, first go to the **CONFIG** menu and use the **UP** arrow to move down to the "pH Comp" selection screen. With the display indicating pH COMP on the bottom line, press and hold the **LEFT** arrow key for approximately 5 seconds. The display changes to "Edit Table."

From this point on, you have access to 4 menus that allow for adjustment of the pH curve. They are *Edit Table*, *Load Table*, *Bkup Table* and *AC Go*.

Edit Table This routine allows you to change the multiplier applied to the chlorine measurement at various pH values. Use the **UP** arrow to review the current table values. Pressing the **UP** arrow key sequences through each of 8 pH values and the corresponding multiplier. Generally, only the multipliers at high pH need adjustment, and then only rarely. If you find the monitor is over correcting, calculate the percentage of over-correction and reduce the multiplier by that percentage. If under-correcting, increase the multiplier.

Load Table This routine allows the user to load one of two standard tables into the system. One is referred to a *Lo Gain*. This table applies smaller multipliers to high pH situations and is often used for very low conductivity water. The *Hi Gain* choice applies to applications where the pH dependence is much steeper at pH values above 9. The *Lo Gain* table is the factory default and is loaded when you first install your monitor. Actually editing data by using the *Edit Table* routine requires careful testing and calculations.

Bkup Table This routine allows the user to store an edited table or the table selected in the *Load Table* routine as the "Default" table. This should always be done if a change is made. If you do not store an edited table as the default, your changes could be lost. Press **ENTER** to be prompted for either "No" or "Yes." Always answer "Yes" when a new table has been calculated to protect your work. The factory default is the *Lo Gain* table, which is stored in the *Backup Table* location.

AC Go This routine refers to "Auto Calculate." This routine allows an operator to circulate water with a constant chlorine value through the system, changing the pH and storing the calculated pH correction value under dynamic conditions. This routine should be used with care, and we suggest you consult a Badger Meter technician before attempting this routine. Detailed instructions are available from Badger Meter for using this feature, but only by request.

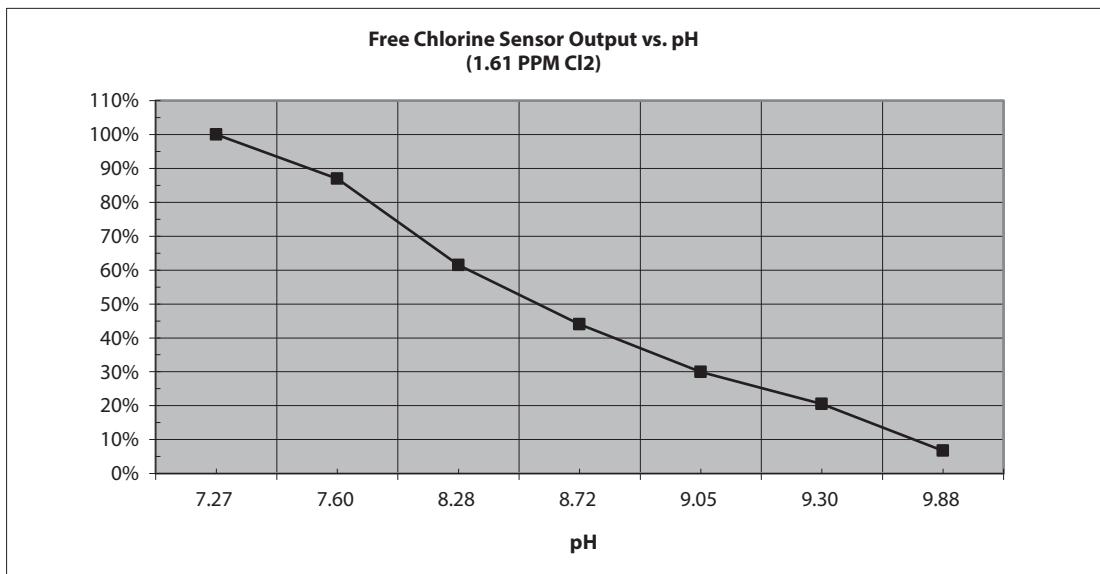


Figure 25: Typical free chlorine response to change in pH

pH Correction – Table Modification Example

In unusual applications where sample pH can vary widely, and especially when pH values can run in the 8...10 range, default pH correction factors may not fit every application. Assume for this example that you are running a free chlorine residual of 2.0 ppm and your pH is around 8.0 but occasionally spikes up to 9.5 for short periods. The chlorine monitor correctly reads 2.0 at pH 8, but the value drops to 1.7 when the pH gets to 9.5. While not a major error, it does indicate that the pH correction multiplier applied at the 9.5 pH level is slightly lower than is needed for your application.

In order to fine tune the pH correction, you must increase the multiplier factor used at the high pH values. This can be done by editing the pH correction table. Go to the **CONFIG** menu and use the up key to move to the "pH Comp" selection. Press and hold the left arrow key for 5 seconds. The bottom line changes to "Edit Table" and the large display indicates a pH of 6.55 (assuming the default table is running). Press the **ENTER** key and the pH value begins to flash. Press the **UP** key once to see the multiplier for pH 6.55. Continuing to press the **UP** key goes through each pH value and the multiplier associated with it.

When you reach the pH value of 9.55, pressing the key displays a multiplier of 4.850, again assuming no changes have been made previously. You can calculate your new multiplier value by calculating how much added multiplier is needed to get to the correct chlorine value. In this case:

- Actual Chlorine = 2.00 ppm
- Displayed Chlorine = 1.70 ppm

Calculate Deviation % by dividing the difference in values, which is -0.30 ppm by 2.00 ppm. This is equal to -15% deviation. To correct for a negative deviation of 15%, you must increase the multiplier by the same amount.

The new multiplier then is $4.850 \times 1.15 = 5.577$.

With the original 4.850 multiplier on the display, press **ENTER** and the value flashes. Use the **UP** key to change each digit and the **LEFT** key to move from digit to digit. When done, press **ENTER**.

In this example, you have now changed your 9.55 multiplier, but the multipliers at 8.55 and 9.05 are still unchanged. If you assume that this roughly 15% under compensation is about the same above pH 8, you can go back and also increase these two multipliers by 15% as well. Since the unit is accurate at pH 8, do not change that value or any of the multipliers at lower pH values.

Storing Modified Table

If you modify the pH correction table, it is very important that you store this table properly so that it can be recovered. It would also be a good idea to write down your modified values in the blank column on the table under "["Modifying pH Correction Values" on page 48](#)". Storing your modified table in the *Backup Table* memory location allows you to reload your edited table in the event that the table in the instrument becomes corrupted in some way. We call this the happy fingers recovery routine.

Once you have finished all modifications, press the **MENU** key to return to the beginning of the "Edit Table" selection. Press the **UP** key twice and "Bkup Table" displays, with "NO" on the main screen. Press **ENTER** and use the **UP** key to change the "NO" to "YES", then press **ENTER**. Your edited table is now the default running table. The changes you made to the edited table are also saved if you turn power off or perform a *Default All* or *DefaultCal* reset. However, if the edited table is somehow changed, you can always go to the *Load Table* routine and restore your edited table if necessary.

PID CONTROLLER DETAILS

PID Description

PID control, like many other control schemes, are used in chemical control to improve the efficiency of chemical addition or control. By properly tuning the control loop that controls chemical addition, only the amount of chemical that is truly required is added to the system, saving money. The savings can be substantial when compared to a system which may be simply adding chemical at a constant rate to maintain some minimal addition under even the worst case conditions. The PID output controller is highly advantageous over simple control schemes that just use direct (proportional only) 4...20 mA output connections for control, since the PID controller can automatically adjust the "rate" of recovery based on the error between the setpoint and the measured value, which can be a substantial efficiency improvement.

The PID controller is basically designed to provide a "servo" action on the 4...20 mA output to control a process. If the user requires that a measured process stay as close as possible to a specific setpoint value, the controller output changes from 0...100% in an effort to keep the process at the setpoint. To affect this control, the controller must be used with properly selected control elements (valves, proper chemicals, for example) that enable the controller to add or subtract chemical rapidly enough. This is not only specific to pumps and valves, but also to line sizes and delays in the system.

This section is included to give a brief description of tuning details for the PID controller and is not intended to be an exhaustive analysis of the complexities of PID loop tuning. Numerous sources are available for specialized methods of tuning that are appropriate for a specific application.

PID Algorithm

As most users of PID controllers realize, the terminology for the actual algorithm terms and even the algorithms themselves can vary between different manufacturers. This is important to recognize as early as possible, since just plugging in similar values from one controller into another can result in dramatically different results. There are various basic forms of PID algorithms that are commonly seen. The implementation here is the most common version (the ISA algorithm, commonly referred to as the "ideal" algorithm).

Q46H ISA PID Equation

$$\text{output} = P \left[e(t) + \frac{1}{I} \int e(t) dt + D \frac{de(t)}{dt} \right]$$

Where:

- output = controller output
- P = proportional gain
- I = integral gain
- D = derivative gain
- t = time
- e(t) = controller error (e=measured variable – setpoint)

The most notable feature of the algorithm is the fact the proportional gain term affects all components directly (unlike some other algorithms—like the "series" form). If a pre-existing controller uses the same form of the algorithm shown above, it is likely similar settings can be made if the units on the settings are exactly the same. Be careful of this, as many times the units are the reciprocals of each other (that is, reps-per-min or sec-per-rep).

PID stands for "proportional, integral, derivative." These terms describe the three elements of the complete controller action, and each contributes a specific reaction in the control process. The PID controller is designed to be primarily used in a "closed-loop" control scheme, where the output of the controller directly affects the input through some control device, such as a pump or valve, for example.

Although the three components of the PID are described in the setting area ["Control Menu \[CONTROL\]" on page 39](#), here are more general descriptions of what each of the PID elements contribute to the overall action of the controller.

- P** Proportional gain. With no "I" or "D" contribution, the controller output is simply a factor of the proportional gain multiplied by the input error (difference between the measured input and the controller setpoint). Because a typical chemical control loop cannot react instantaneously to a correction signal, proportional gain is typically not efficient by itself—it must be combined with some integral action to be useful. Set the "P" term to a number between 2...4 to start. Higher numbers cause the controller action to be quicker.
- I** Integral gain. Integral gain is what allows the controller to eventually drive the input error to zero, providing accuracy to the control loop. It must be used to affect the accuracy in the servo action of the controller. Like proportional gain, increasing integral gain results in the control action happening quicker. Set the "I" term to a number between 3...5 to start (1...2 more than "P"). Like proportional gain, increasing the integral term causes the controller action to be quicker.
- D** Derivative gain. The addition of derivative control can be problematic in many applications, because it greatly contributes to oscillatory behavior. In inherently slow chemical control processes, differential control is generally added in very small amounts to suppress erratic actions in the process that are non-continuous, such as pumps and valves clicking on and off. However, as a starting point for chemical process control, it is best to leave the "D" term set to 0.

Based on these descriptions, the focus on tuning for chemical applications really only involves adjustment of "P" and "I" in most cases. However, increasing both increases the response of the controller. The difference is in the time of recovery. Although combinations of high "Ps" and low "Is" appear to operate the same as combinations of low "Ps" and high "Is", there is a difference in rate of recovery and stability. Because of the way the algorithm is structured, large "Ps" can have a larger impact to instability, because the proportional gain term impacts all the other terms directly. Therefore, keep proportional gain lower to start and increase integral gain to achieve the effect required.

Many of the classical tuning techniques have the user start with all values at 0, and then increase the "P" term until oscillations occur. The "P" value is then reduced to 1/2 of the oscillatory value, and the "I" term is increased to give the desired response. This can be done with the Q46H controller, with the exception that the "I" term should start no lower than 1.0.

If it appears that even large amounts of integral gain (>20) do not appreciably increase the desired response, drop "I" back to about 1.0, and increase "P" by 1.00 and start increasing "I" again. In most chemical control schemes, "I" is approximately 3 times the value of "P".

Classical PID Tuning

Unlike many high speed position applications where PID loops are commonly used, the chemical feed application employed by this instrument does not require intense mathematical exercise to determine tuning parameters for the PID. In fact, the risk of instability is far greater with overly tuned PID control schemes. In addition, many of the classical mathematical exercises can be damaging or wasteful in the use of chemicals when the process is bumped with large amounts of input error to seek a response curve. Because of this, the general adjustment guidelines described in ["PID Algorithm" on page 51](#) are sufficient for almost all application tuning for this instrument. Beyond this, many sources are available for classical tuning methods.

Manual PID Override Control

The Q46 *PID Output* function allows the user to take manual control of the PID control signal. This is often useful when starting up a control loop, or in the event that you wish to bump the system manually to measure system response time.

To access the manual PID control, you must be in the *MEASURE* mode of operation and you must have the PID output displayed on the lower line. This line indicates "XX.X% XX.X mA" with the X values simply indicating the current values. With this display on the screen, press and hold the **ENTER** key for about 5 seconds. A small "m" shows up between the % value and the mA value. This indicates you are now in *Manual* mode.

Once in manual, you may increase the PID output by pressing the **UP** arrow key or you may decrease the output by pressing the **LEFT** arrow key. This allows you to drive the PID output to any desired setting.

To revert to normal PID control, press and hold the **ENTER** key again until the "m" indicator disappears.

Common PID Pitfalls

The most common problem occurring in PID control applications involves the false belief that proper settings on only the PID controller can balance any process to an efficient level.

Close-loop control can only be effective if all elements in the loop are properly selected for the application, and the process behavior is properly understood. Luckily, the nature of simple chemical control processes are generally slow in nature.

Therefore, even a de-tuned controller (one that responds somewhat slowly) can still provide substantial improvements to setpoint control. In fact, damaging oscillatory behavior is far more likely in tightly tuned controllers where the user attempted to increase response too much.

When deciding on a PID control scheme, it is important to initially review all elements of the process. Sticking valves, undersized pumps or delays in reaction times associated with chemical addition can have a dramatic effect on the stability of the control loop. When controlling a chemical mix or reaction, the sensor should be placed in a location that ensures proper mixing or reaction time has occurred.

The easiest processes to control with closed-loop schemes are generally linear, and symmetrical, in nature. For example, controlling level in tank where the opening of valve for a fixed period of time corresponds linearly to the amount that flows into a tank. Chemical control processes can be more problematic when the nature of the setpoint value is nonlinear relative to the input of chemical added. For example, pH control of a process may appear linear only in a certain range of operation and become highly exponential at the extreme ranges of the measuring scale. In addition, if a chemical process is not symmetrical, that means it responds differentially to the addition and subtraction of chemical. It is important in these applications to study steady-state impact as well as step-change impact to process changes. In other words, once the process has apparently been tuned under normal operating conditions, the user should attempt to force a dramatic change to the input to study how the output reacts. If this is difficult to do with the actual process input (the recommended method), the user can place the control in manual at an extreme control point such as 5% or 95%, and release it in manual. The recovery should not be overly oscillatory. If so, the loop needs to be de-tuned to deal with that condition (reduce "P" and/or "I").

SYSTEM MAINTENANCE

General

The Q46H/62 Free Chlorine System generally provides unattended operation over long periods of time. With proper care, the system should continue to provide measurements indefinitely. For reliable operation, maintenance on the system must be done on a regular schedule. Keep in mind that preventive maintenance on a regular schedule is much less troublesome than emergency maintenance that always seems to come at the wrong time.

Analyzer Maintenance

No unusual maintenance of the analyzer is required if installed according to the guidelines of this operating manual. If the enclosure door is frequently opened and closed, it would be wise to periodically inspect the enclosure sealing gasket for breaks or tears.

Sensor Maintenance

Sensor maintenance is required for accurate measurements. The primary requirement is simply to keep the sensor membrane clean. The membrane is a micro-porous polymer that is resistant to anything that is encountered in water streams. However, deposits can form on the surface or in the pores of the membrane, and these deposits reduce the sensitivity. Certain constituents in water, mainly iron and manganese, form precipitates when the water is chlorinated. These precipitates can sometimes form a coating on the membrane.

Because membranes are micro-porous, they can be relatively difficult to clean effectively. Immersing the tip of the sensor in 1N nitric acid solution sometimes removes deposits that cause low sensitivity, but this is not always the case. The recommended practice is to simply replace the membrane when it becomes fouled. To change a membrane, follow the Sensor Assembly procedure (see ["Chlorine Sensor Preparation" on page 27](#)). Do not reuse the electrolyte from the sensor when changing a membrane. Always refill with fresh electrolyte. The electrolyte is stable and does not have a limited shelf life.

Refer again to the explanation of the sensor slope number after an accepted span calibration on the lower *MEASURE* screen. In normal operation, the slope of the sensor output decreases over time as the membrane becomes fouled. This reduction indicates that the sensor is losing sensitivity to chlorine. It is good practice to replace the membrane if the slope number falls to 30...40%. The value does not go below 20%.

Even if no buildup is apparent on the membrane, it should be changed on a regular schedule. The recommended membrane change interval is every 3 months. For high purity water applications, this can probably be extended if desired, but a more frequent changing interval is a small price to pay for avoiding membrane failure at the wrong time.

While the sensor is disassembled for membrane changing, examine the condition of the O-rings on both ends of the electrolyte chamber. If the O-rings show any signs of damage, replace them with new ones from the spare parts kit. It is good practice to change these O-rings once a year, regardless of their condition.

Sensor Acid Cleaning

Over an extended operating period, chlorine sensors can slowly accumulate deposits on the surface of the platinum electrode. Typically, this type of buildup occurs over years of operation, but can sometimes occur more quickly if high levels of manganese, iron or other metals are dissolved in the water. The platinum electrode can be “acid cleaned” using nitric acid solutions.

⚠ WARNING

THIS ACID CLEANING PROCEDURE INVOLVES THE USE OF HIGHLY CORROSIVE ACID SOLUTIONS. IT SHOULD ONLY BE COMPLETED BY TRAINED PERSONNEL USING PROTECTIVE EYEWEAR AND GLOVES. IF THERE IS ANY DOUBT ABOUT YOUR ABILITY TO SAFELY ACCOMPLISH THIS PROCEDURE, RETURN THE SENSOR TO BADGER METER FOR FACTORY CLEANING!

To acid clean the electrode assembly, remove the electrolyte chamber from the sensor so that both electrodes are exposed. Then follow the procedure below:

1. Place a small amount of 50% nitric acid solution in a beaker. Put in just enough so that the platinum tip of the sensor can be submerged without any contact with the silver coil.
2. Allow the sensor to soak in this acid solution for 2 minutes. Remove the sensor body and rinse the platinum tip thoroughly with distilled water. Discard the nitric acid safely and according to all environmental regulations.
3. Fill the beaker with distilled water to the level sufficient to submerge both the tip and the silver coil. Do not allow the connector at the back of the sensor to be submerged. Allow the electrodes to soak in distilled water for 30 minutes.
4. Put a new membrane and fresh electrolyte in the electrolyte chamber and reassemble the sensor. Connect to the chlorine monitor electronics and allow the sensor to stabilize for at least 24 hours. The sensor can be placed in the flow cell with chlorinated water running through it during stabilization. However, the readings are not useful for 24 hours.

Q22P Sensor Cleaning

Keep the sensor as clean as possible for optimum measurement accuracy - this includes both the saltbridge and the measuring electrode glass. Frequency of cleaning depends upon the process solution.

Carefully wipe the measuring end of the sensor with a clean soft cloth. Then rinse with clean, warm water - use distilled or de-ionized water if possible. This should remove most contaminant buildup.

Prepare a mild solution of soap and warm water. Use a non-abrasive detergent (such as dishwashing liquid).

NOTE: DO NOT use a soap containing any oils (such as lanolin). Oils can coat the glass electrode and harm sensor performance.

Soak the sensor for several minutes in the soap solution.

Use a small, extra-soft bristle brush (such as a mushroom brush) to thoroughly clean the electrode and saltbridge surfaces. If surface deposits are not completely removed after performing this step, use a dilute acid to dissolve the deposits. After soaking, rinse the sensor thoroughly with clean, warm water.

Placing the sensor in pH 7 buffer for about 10 minutes helps neutralize any remaining acid.

NOTE: DO NOT soak the sensor in dilute acid solution for more than 5 minutes. This helps prevent the acid from being absorbed into the saltbridge.

⚠ WARNING

ACIDS ARE HAZARDOUS. ALWAYS WEAR EYE AND SKIN PROTECTION WHEN HANDLING. FOLLOW ALL MATERIAL SAFETY DATA SHEET RECOMMENDATIONS. A HAZARDOUS CHEMICAL REACTION CAN BE CREATED WHEN CERTAIN ACIDS COME IN CONTACT WITH PROCESS CHEMICALS. MAKE THIS DETERMINATION BEFORE CLEANING WITH ANY ACID, REGARDLESS OF CONCENTRATION.

Replacing the Saltbridge and Reference Buffer Solution

1. Hold the sensor with the process electrode pointing up. Place a cloth or towel around the saltbridge. Turn the saltbridge counterclockwise (by hand) to loosen and remove the saltbridge. Do NOT use pliers.
2. Pour out the old reference buffer by inverting the sensor (process electrode pointing down). If the reference buffer does not run out, gently shake or tap the sensor.
3. Rinse the reference chamber of the sensor with de-ionized water. Fill the reference chamber of the sensor with fresh Reference Cell Buffer. The chamber holds 6...7 mL of solution. MAKE SURE that 6...7 mL is used when refilling. The chamber should be FULL.
4. Inspect the new saltbridge to verify that there are 2 O-rings inside the threaded section of the saltbridge.
5. Place the new saltbridge over the ground assembly of the sensor. Place a cloth or towel around the saltbridge and hand-tighten the saltbridge by turning it clockwise.

NOTE: Every Badger Meter Q25P Sensor includes a spare bottle of Reference Buffer Solution, 7.0 pH. This is NOT typical pH 7 buffer, it is a special "high-capacity" buffer developed to ensure the highest possible stability of the reference portion of the pH measurement. No substitutions should be made.

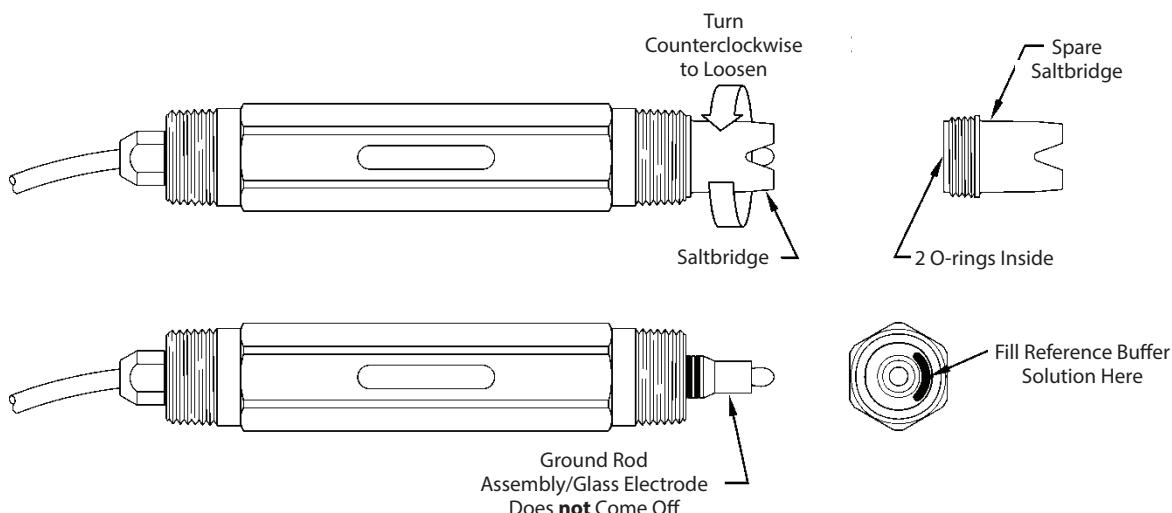


Figure 26: Replacing the saltbridge and reference buffer

Flow cell Maintenance

The maintenance on the flow cell is simple cleaning. The flow cell is clear to make examination of the condition of the sensor easier without interfering with operations. The flow cell may be cleaned by wiping or by washing with detergents or dilute acids. Do not try to clean with solvents as the acrylic may craze or crack.

Change the O-ring in the flow cell yearly or if any damage is observed. If insertion of the sensor into the flow cell becomes difficult, use silicon grease to lubricate the O-rings that hold the sensor in place. Use only enough grease to provide surface lubrication. Excess grease could foul the sensor membrane.

TROUBLESHOOTING

General

The information included in this section is intended to be used in an attempt to quickly resolve an operational problem with the system. During any troubleshooting process, it saves the most time if the operator can first determine if the problem is related to the analyzer, sensor or some external source. Therefore, this section is organized from the approach of excluding any likely external sources, isolating the analyzer and finally isolating the sensor. If these procedures still do not resolve the operational problems, any results the operator may have noted here are very helpful when discussing the problem with the factory technical support group.

External Sources of Problems

To begin this process, review the connections of the system to all external connections.

1. Verify the analyzer is earth grounded. For all configurations of the analyzer, an earth ground connection MUST be present for the shielding systems in the electronics to be active. Grounded conduit provides no earth connection to the plastic enclosure, so an earth ground wiring connection must be made at the power input terminal strip. Verify metal shield is present over incoming power connections. This shield is for safety purposes, but also blocks electrical spikes from relay and power wiring.
2. Verify the proper power input is present (90...260VAC or 12...24V DC).
3. Verify the loads on any 4...20 mA outputs do not exceed the limits in the Instrument Specifications. During troubleshooting, it is many times helpful to disconnect all these outputs and place wire-shorts across the terminals in the instrument to isolate the system and evaluate any problems which may be coming down the analog output connections.
4. Do not run sensor cables or analog output wiring in the same conduits as power wiring. If low voltage signal cables must come near power wiring, cross them at 90° to minimize coupling.
5. If rigid conduit has been run directly to the Q46 enclosure, check for signs that moisture has followed conduit into the enclosure.
6. Check for ground loops. Although the membrane sensor is electrically isolated from the process water, high frequency sources of electrical noise may still cause erratic behavior in extreme conditions. If readings are very erratic after wiring has been checked, check for a possible AC ground loop by temporarily disconnecting feed and drain lines from the flow cell while there is still water on the inside. The reading should be initially stable and then fall very slowly in a smooth fashion as chlorine is depleted in the static sample.
7. Check the load that is connected to the relay contacts. Verify the load is within the contact rating of the relays. Relay contacts which have been used for higher power AC current loads may become unsuitable for very low signal DC loads later on because a small amount of pitting can form on the contacts. If the load is highly inductive (solenoids, motor starters, large aux relays), note that the contact rating is de-rated to a lower level. Also, due to the large amount of energy present in circuits driving these types of loads when they are switched on or off, the relay wiring placement can result in electrical interference for other devices. This can be quickly resolved by moving wiring, or by adding very inexpensive snubbers (such as Quencharcs) to the load.
8. Carefully examine any junction box connections for loose wiring or bad wire stripping. If possible, connect the sensor directly to the analyzer for testing.
9. Check sensor membrane for fouling. Look closely for signs of grease or oil which may be present. Replace membrane and electrolyte, allow to stabilize and re-check. The procedure for "[Chlorine Sensor Preparation](#)" on page 27 must be followed when replacing the membrane.
10. Check pH of water sample. High pH conditions can cause low sensitivity. If pH is above 8.2, contact Badger Meter for information on carbon dioxide buffer systems.
11. Check to see that the chlorine in the water is free chlorine and not combined chlorine. The free chlorine sensor has almost no sensitivity to monochloramine.

Analyzer Tests

1. Disconnect power and completely disconnect all output wiring coming from the analyzer. Remove sensor wiring, relay wiring and analog output wiring. Re-apply power to the analyzer.
2. Using the *Simulate* feature, check operation of analog outputs and relays with a DMM.
3. Check cell drive circuit. With a digital voltmeter (DVM), measure the voltage between ORANGE (-) and WHITE (+) terminals. Verify that the millivolt value is actually -200 mV.
4. Check TC drive circuit. Place a wire-short between the GREEN and BLACK terminals. With a digital voltmeter (DVM), measure the voltage between the BLACK and RED terminals on the back of the monitor to verify that the TC drive circuit is producing about 4.8...5.1V DC open circuit. Remove DVM completely and connect a 100 Ohms resistor from the BLACK to RED terminals. The temperature reading should display approximately 0° C and the chlorine reading should display approximately 0 ppm.

Display Messages

The Q46 Series instruments provide a number of diagnostic messages which indicate problems during normal operation and calibration. These messages appear as prompts on the secondary line of the display or as items on the *Fault List*.

The following messages appear as prompts:

Message	Description	Possible Correction
Max is 200	Entry failed, maximum user value allowed is 200.	Reduce value to ≤ 200 .
Min is 20	Entry failed, minimum value allowed is 20.	Increase value to ≥ 20 .
Cal Unstable	Calibration problem, data too unstable to calibrate. Icons do not stop flashing if data is too unstable. User can bypass by pressing ENTER .	Clean sensor, get fresh cal solutions, allow temperature and conductivity readings to fully stabilize, do not handle sensor or cable during calibration.
Out of Range	Input value is outside selected range of the specific list item being configured.	Check manual for limits of the function to be configured.
Locked!	Analyzer security setting is locked.	Enter security code to allow modifications to settings.
Unlocked!	Analyzer security has just been unlocked.	Displayed just after security code has been entered.
Offset High	The sensor zero offset point is out of the acceptable range of -25...+25 nA.	Check wiring connections to sensor. Allow sensor to operate powered a minimum of 12 hours prior to first zero cal.
Sensor High	The raw signal from the sensor is too high and out of instrument range.	Check wiring connections to sensor.
Sensor Low	The raw signal from the sensor is too low.	Check wiring connections to sensor.
Chlor High	The chlorine reading is greater than the maximum of the user-selected range.	The chlorine reading is over operating limits. Set measuring range to the next highest level.
Temp High	The temperature reading is $> 55^{\circ}\text{C}$.	The temperature reading is over operating limits. Check wiring and expected temp level. Perform RTD test as described in sensor manual. Recalibrate sensor temperature element if necessary.
Temp Low	The temperature reading is $< -10^{\circ}\text{C}$.	Same as "Temp High" above.
TC Error	TC may be open or shorted.	Check sensor wiring and perform RTD test as described in sensor manual. Check j-box connections.
Chlor Cal Fail	Failure of chlorine calibration. <i>FAIL</i> icon does not extinguish until successful calibration has been performed, or 30 minutes passes with no keys being pressed.	Clean sensor, redo zero and span calibration. If still failure, sensor slope may be less than 25% or greater than 250%. Perform sensor tests as described in " Sensor Tests on page 60". Replace sensor if still failure.
TC Cal Fail	Failure of temperature calibration. <i>FAIL</i> icon does not extinguish until successful calibration has been performed, or 30 minutes passes with no keys being pressed.	Clean sensor, check cal solution temperature and repeat sensor temp calibration. TC calibration function only allows adjustments of $+- 6^{\circ}\text{C}$. If still failure, perform sensor tests as described in " Sensor Tests on page 60". Replace sensor if still failure.
EEPROM Fail	Internal nonvolatile memory failure.	System failure, consult factory.
Checksum Fail	Internal software storage error.	System failure, consult factory.

Sensor Tests

1. Check the membrane condition. A membrane that is not stretched smoothly across the tip of the sensor causes unstable measurements. If necessary, change membrane and electrolyte.
2. Residual chlorine sensors can be tested with a digital voltmeter (DVM) to determine if a major sensor problem exists. Follow the steps below to verify sensor integrity:
 - a. Disconnect the five sensor wires from the back of the chlorine monitor. Those wires are color coded white, brown, red, black and green.

NOTE: The brown wire may be replaced with an orange wire in some cables.

 - b. Remove the electrolyte chamber from the sensor and dry the electrodes with a paper towel.
 - c. Connect a DVM between the white and brown (or orange) wires. Reading resistance, you should find an open circuit value of infinite resistance. There must be no measurable resistance at all between these wires. Any resistance at all indicates either water in the cable connector or the breakdown in an electrode seal.
 - d. Connect a DVM between the red and white wires. The red wire is part of the RTD circuit and the white wire is part of the measuring cell. There should be no connection. Reading resistance, you should find an open circuit value of infinite resistance. Any resistance at all indicates either water in the cable connector or the breakdown in an electrode seal.
 - e. Connect the DVM between the red and black wires. These are the RTD leads, and you should find a resistance value that depends on the temperature. Reading resistance between the red and green wires should give exactly the same values as between red and black. The table below lists the resistance values for various temperatures.

Temperature	Resistance
0° C	100.0 Ω
5° C	101.9 Ω
10° C	103.9 Ω
15° C	105.8 Ω
20° C	107.8 Ω
25° C	109.7 Ω
30° C	111.7 Ω
35° C	113.6 Ω
40° C	115.5 Ω
45° C	117.5 Ω
50° C	119.4 Ω

If you suspect that water has gotten into a cable connection on a flow type sensor or into the plug connection of a submersible sensor, disconnect the cable and allow the parts of the sensor to sit in a warm place for 24 hours. If water in the connector is the problem, it should dry out sufficiently to allow normal sensor operation. However, steps 2c...2e above have to be repeated after drying to see if the problem is gone.

3. Acid clean the sensor electrodes in accordance with the procedure on ["Sensor Acid Cleaning" on page 55](#).

Troubleshooting (Q22P Sensor)

The first step in resolving any measurement problem is to determine whether the trouble lies in the sensor or the transmitter. Since measurement problems can often be traced to dirty sensor electrode glass and/or saltbridge, cleaning the sensor using the method outlined in ["System Maintenance" on page 54](#) should always be the first step in any troubleshooting.

If the sensor cannot be calibrated after cleaning, replace the saltbridge and Reference Cell Buffer pH 7 as outlined in ["System Maintenance" on page 54](#).

If the sensor still cannot be calibrated, perform the following test. A multimeter, pH 7 buffer and pH 4 buffer is needed.

1. With transmitter power on and sensor connected, place the multimeter's positive (+) lead on the white position of the transmitter terminal strip and the negative (-) lead on the black position. The multimeter should read between -4.2...-6.5V DC.
2. Disconnect the sensor's black and red wires from the transmitter or junction box. Re-check step 1.
3. Place the sensor in pH 7 buffer. As in calibration, allow the temperatures of the sensor and buffer to equilibrate at room temperature (approximately 25° C).
4. Connect the multimeter's positive (+) lead to the red wire and its negative (-) lead to the black wire. With the sensor in the pH 7 buffer at approximately 20...30° C, measure the DC millivolts. The sensor reading should be between 680...750 mV. If it is not, replace sensor reference solution, saltbridge and re-test.
5. With the multimeter connected as in step 4, rinse the sensor with clean water and place it in the pH 4 buffer. Allow the temperatures to equilibrate as before. Now measure the sensor span reading. It should be between +450...550 mV.

SPARE PARTS

Part No.	Description
03-0407	P/S Assy, 100...240VAC
03-0408	P/S Assy, 100...240VAC with 3rd 4...20 mA output
03-0409	P/S Assy, 100...240VAC with 3 relay exp. Board
03-0410	P/S Assy, 12...24V DC
03-0411	P/S Assy, 12...24V DC with 3rd 4...20 mA output
03-0412	P/S Assy, 12...24V DC with 3 relay exp. Board
00-0066	Chlorine sensor, flow type
02-0016	Sensing element body, (for #00-0066)
03-0029	Sensor interconnect cable with connector, 25 ft
45-0007	Electrolyte chamber
48-0001	Membrane holder, type 316 stainless steel
45-0010	Membrane holder, noryl
05-0005*	Membranes, pkg. of 10
05-0004*	Spare Parts Kit, screw and O-ring
09-0011*	Free chlorine electrolyte, 4 oz (120 cc)
07-0096	Q22P pH Sensor with connector (not waterproof)
63-0101	25 ft Combination pH Sensor (w/Solution Ground)
45-0268	1 in. NPT Flow Adapter (#63-0101)
09-0052	Reference Solution for pH sensor (#07-0096)
05-0066	Saltbridge for pH sensor (#07-0096)
00-0043	Constant-Head Flow cell assembly with mounting plate
42-0014	Flow cell O-ring (each)
07-0100	Junction box
31-0038	Interconnect cable for junction box to monitor wiring
23-0029	Fuse, 630 mA, 250V, TR-5 (for AC and DC Analyzers)
38-0073	Terminal block plug, 4 position (outputs)
38-0072	Terminal block plug, 3 position (relays)
38-0081	Terminal block plug, 3 position (power)
38-0074	Terminal block plug, 3 position (shields)
38-0084	Terminal block plug, 3 position (power) – V DC version*

***NOTE:** Prior to Dec. 2018, V DC (power) Terminal block used the (38-0081)

Part No.	Description
44-0260	Pg9 cord grip (each)
44-0263	1/2 in. NPT 2-hole cord grip
44-0274	1/2 in. NPT cord grip (each)
48-0108	2-Hole Cord Grip Adapter
03-0372	Fixed Flow Regulator Assy
00-1522	Sealed Cl ₂ Flow cell Assy
00-1527	Sealed pH Flow cell Assy
05-0101	Sealed Cl ₂ Flow cell Vacuum Breaker

NOTE: Instrument is supplied with sufficient spare parts for 6...12 months of operation. For 2 year spare parts inventory, 3 each of the items marked with an asterisk are required.

Lock/Unlock Code: 1461

